


## Wiring Diagram

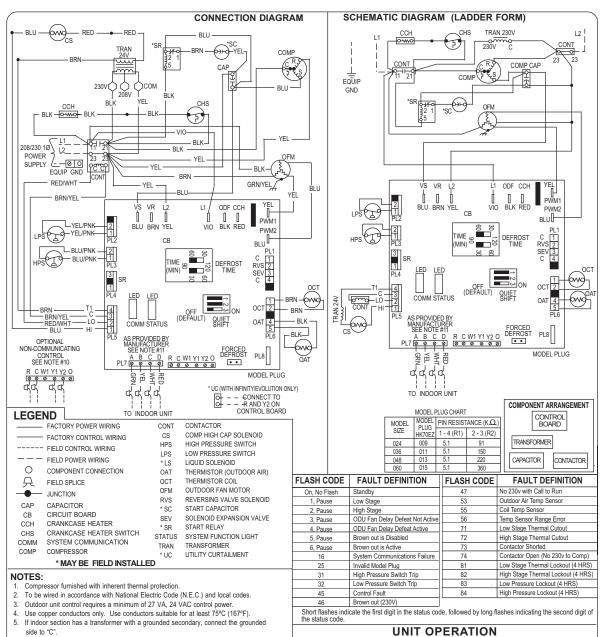

This control board contains a five minute short cycle protector. A five minute delay will occur between compressor OFF/ON cycles. To bypass delay, short forced defrost pins

The crankcase heater is energized during off cycle below 65°F.



337895-101 REV. B

If any of the original wire, as supplied, must be replaced, use the same or equivalent wire.

In case of a communicating indoor system, USE WITH INFINITY / EVOLUTION USER

10. In case of non-communicating indoor system disconnect factory provided wires from A. B. C. and D terminals. Use factory provided wires to connect to Y1, R, C, and Y2 as required by

Check all electrical connections inside control box for tightness. Do not attempt to operate unit until service valves have been opened.

INTERFACE AS LISTED IN PRE-SALE LITERATURE ONLY.

11. For Communicating Control only

Installation Instructions. Cap or remove unused factory provided wires.