

# How to use your SmartThermostat with voice control.

## Get to know your display screen.

**Indoor humidity**

**Indoor temperature**

**eco+**

Automate your comfort setting and energy savings.

**System mode**

Set your system to Heat, Cool or other modes.

**Temperature slider**

Move the bubble up or down to adjust your preferred temperature.

**Weather**

This week's local weather forecast.

**Main menu**


Adjust your schedule, settings, and more.

**Voice control**

Adjust your volume and enable/disable the microphone.

**Quick Changes**

Switch easily between Home and Away modes.

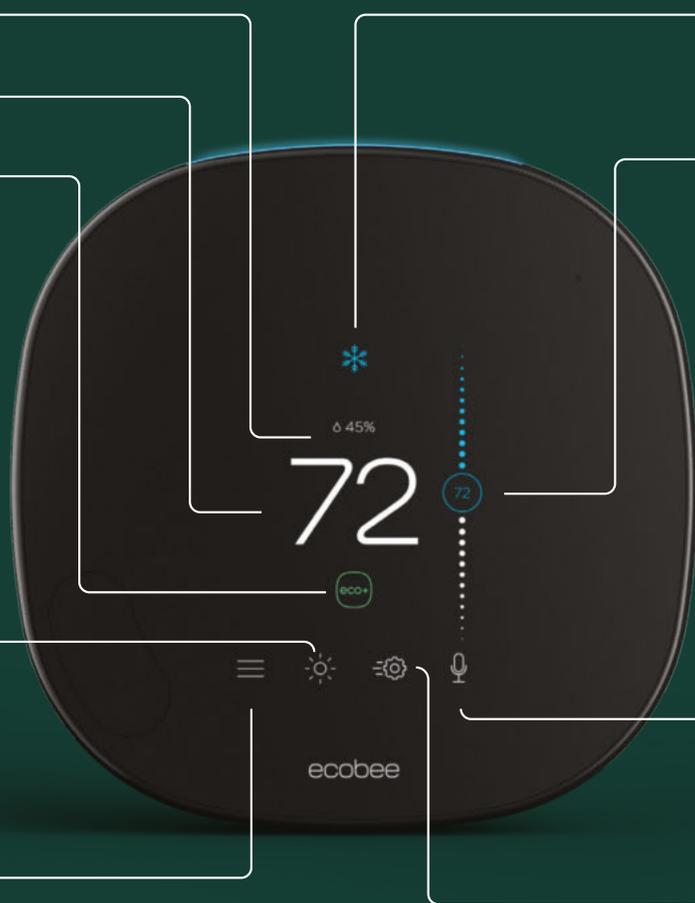

ecobee

# How to use your SmartThermostat with voice control.

## How to adjust your Temperature Slider.

The large number is the present temperature.  
The small number is your desired temperature.

1. Tap the display screen to wake your thermostat.
2. Move the slider up or down to adjust the temperature.
3. Your set temperature will appear below the main temperature display with the word "holding".



## How to set up Home, Away, and Sleep mode.

1. Open the ecobee mobile app.
2. Tap "Your thermostat" along the top left of the screen.
3. Tap the main menu at the bottom left of the screen.
4. Tap "Schedule".
5. Tap the "+" sign at the top right of the screen.
6. Select a temperature range for when you're home, away, or asleep.

## How to set up your SmartSensor.

On your ecobee mobile app: Tap the "+" sign > Sensor > SmartSensor.

On your SmartThermostat: Tap Main Menu > Sensors > Add Sensors > SmartSensor.

1. Tap "Let's get started".
2. Scan the QR code on the SmartSensor's pull tab with your mobile device's camera.
3. Pull the tab to pair.
4. Name your SmartSensor and tap "Save name".
5. Choose the Comfort Settings you would like your sensor to participate in.
6. Tap "Done".