

# Installation Instructions



## INTRODUCTION

These instructions cover the installation of the Locking Control Door Accessory Kit. See Fig. 1.

### PACKAGE CONTENTS

ITEM	QUANTITY
Locking Control Door	1
Keys (Identical)	2

LOCKING CONTROL DOOR

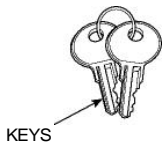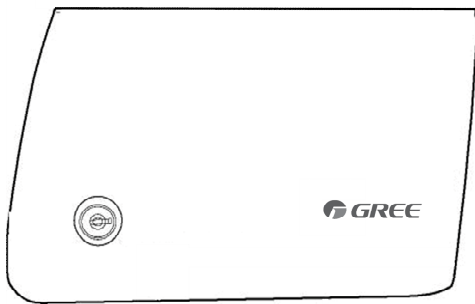


**Fig. 1 — Locking Control Door Assembly**

## INSTALLATION

### Remove Existing Control Door

1. Insert flat head screw driver blade in space between door and front panel as show in Fig. 2.
2. Carefully depress hinge and pry control door up and out of front panel with screw driver.
3. Remove and discard door.

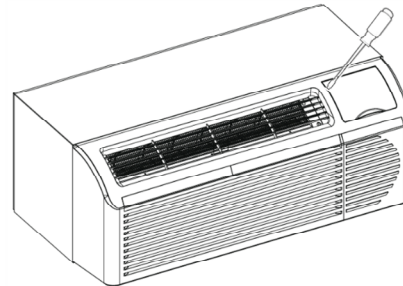


**Fig. 2 — Removing & Attaching Control Door from Front Panel**

### Attach Locking Door

1. Position new locking control door on front panel where previous door was located.
2. Line up attachment hinge pegs on locking door with holes in front panel.
3. While holding door in place, use screw driver to depress hinge and pry the locking door down into the front panel. See Fig. 2.

### Final Assembly and Operation

1. Close and lock door. See Fig. 3.
2. Be sure keys can easily be inserted and removed.
3. Verify door is secure.

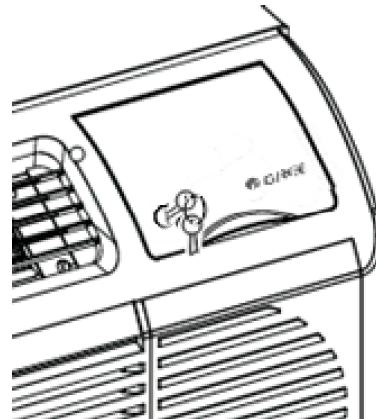

**Fig. 3 — Completed Assembly**