

RESIDENTIAL CONTROLS





PERCENTAGE TIMER (PTL)

- Primary control for EV90, EV90P, EV130, EV200, EV240 & EV300
- Units can run an adjustable amount of time each hour
- Two-wire, low-voltage connection





PUSH BUTTON POINT OF USE TIMER (PBL)

- · Secondary control used in combination with PTL control
- Push-button control turns on unit from bathrooms or other intermittent exhaust locations
- One-touch, 20-minute run-time
- Push 2 times for 40 minutes or 3 times for 60 minutes
- Two-wire, low-voltage connection to PTL control





PERCENTAGE TIMER WITH FURNACE INTERLOCK (FM)

- Alternate primary control for EV90, EV90P, EV130, EV200, EV240 & EV300
- Low-voltage wire connects to EV unit and either thermostat or furnace control to turn on furnace blower
- Six-wire, low-voltage connection