



TP-N-801

VIVE Comfort

1111 S. Glenstone Ave., Suite 2-100
Springfield, MO 65804

Toll-Free: 1-800-776-1635 Web: www.vivecomfort.com

Hours of Operation: M-F 9AM - 6PM Eastern



Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Warranty Registration	4



Caution:


Equipment damage hazard

Do not operate the cooling system if the outdoor temperature is below 50°F (10°C) to prevent possible compressor damage.


Una versión en español de este manual se puede descargar en la página web de la compañía.

OPERATING MANUAL THERMOSTAT QUICK REFERENCE

Getting to know your thermostat

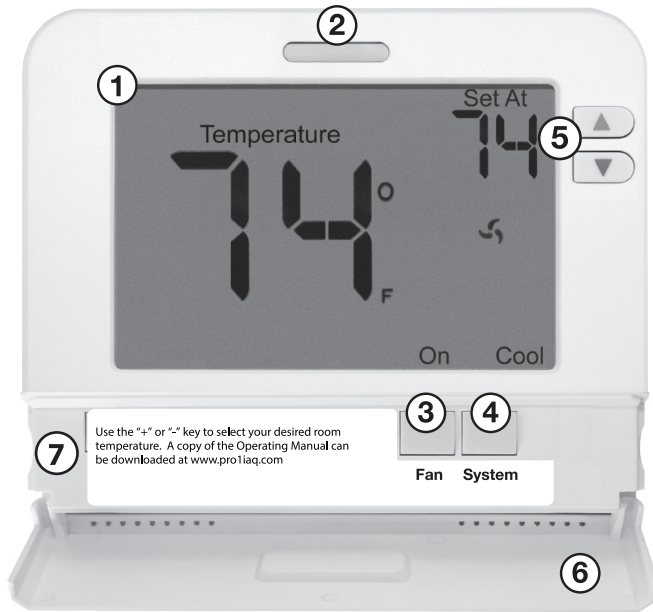

- ② **Glow in the Dark Light Button**
- ③ **Fan Button**
- ④ **System Button**
- ⑤ **Temperature Setpoint Buttons**
- ⑥ **Access Door**
- ⑦ **Battery Cover**

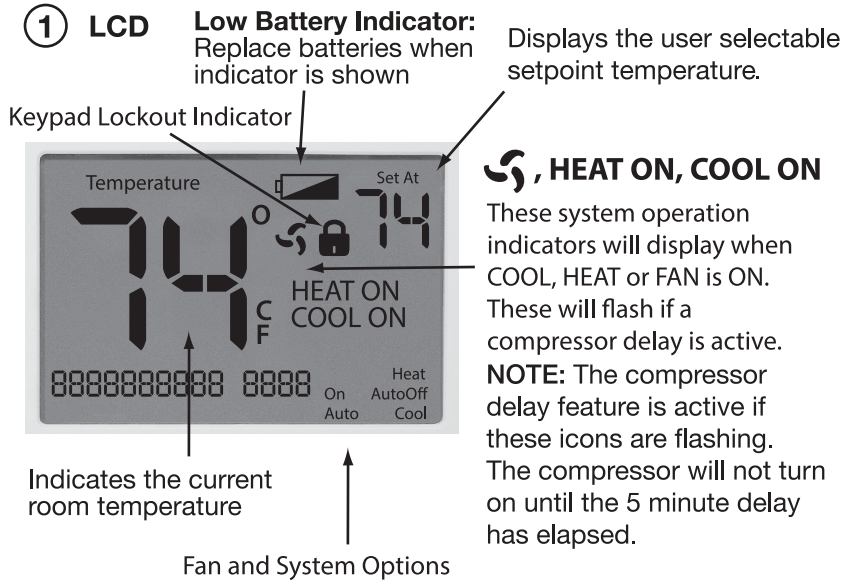

Important:


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the set points will change to 55°F(Heating) and 85°F(Cooling). If the user adjusts these setpoints away from these it will hold for 4 hours then return to either 55°F or 85°F. After day 42 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the battery is changed.

Battery Information


Important:

High quality alkaline batteries are recommended. Rechargeable batteries or low quality batteries do not guarantee a 1-year life span.

To release battery cover press finger bevel on the left side and lift the cover to access batteries.

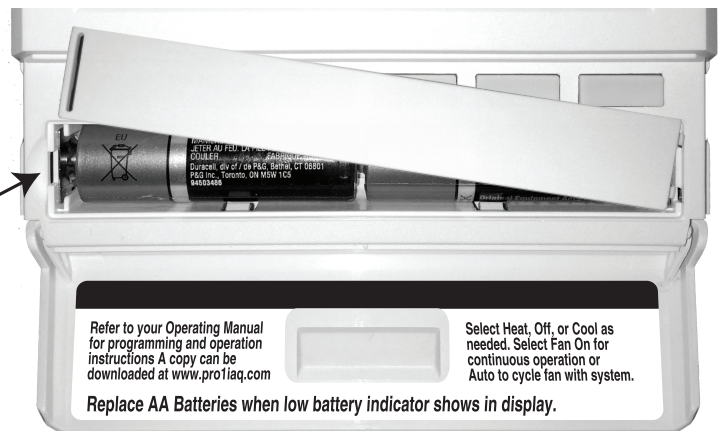

Easy to use controls

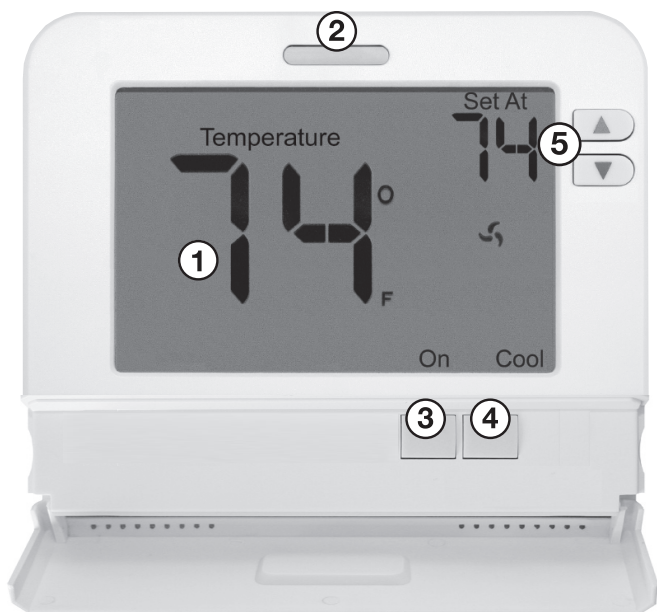

① LCD Display:

See page 2 for details about this display readout and icons.

② Glow in the Dark Light Button:

The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

③ Fan Key:

Select **ON** or **AUTO**. The **ON** key will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.

④ System Key:


Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off. Selecting **AUTO** will turn the heating or cooling on as needed.

⑤ Temperature Setpoint Buttons:

Press the **+** or **-** buttons to select the desired room temperature.




Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

A Note About Auto Changeover:

If in Auto you have the ability to switch between Auto Heat or Auto Cool by pressing the System key. This can be done once the current mode has reached its set-point. For example: if in Auto Heat, the heat setpoint must be satisfied before the thermostat will allow you to switch to Auto Cool. You can switch out of Auto by holding down the System key. To get back into Auto, you must toggle the System key to Auto.

A Note about Keypad Lockout:

If  appears in display then the Keypad is locked. All or some keys will not work. Hold the **FAN + SYSTEM KEYS** for 3 seconds to remove the lock.

Reminder Note:

Your installing contractor may have configured this thermostat to remind you when maintenance is needed. **(FILTER, HUMIDIDTY PAD, UV LAMP, IAQ CELL)**. If so, you will see a reminder on the screen when it is time for maintenance on those items. To reset the reminder, press and hold the **FAN** button for 3 seconds.

Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to our website, and fill out a short registration form online.
- or -
- ② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Address: _____

City: _____

State: _____

Zip: _____

Thermostat Model: _____

Date Installed: _____

Complete form and mail to:

Thermostat Warranty Registration
1111 S. Glenstone
Suite 2-100
Springfield, MO 65804