



Model 76 Dehumidifier Control Installation Instructions

READ AND SAVE THESE INSTRUCTIONS

The Model 76 is for use with any dehumidifier as an **EXTERNAL CONTROL**, including Aprilaire Models 1710A, 1730A, 1750A, 1770A, 1830, 1850 & 1870.

The Model 76 can also be used as a communicating **REMOTE CONTROL** with Aprilaire Models 1710A, 1750A, 1770A, 1830, 1850 & 1870.

(See **OVERVIEW** on page 3 for details.)

SAFETY INSTRUCTIONS

WARNING

1. Improper installation may cause property damage or injury. Installation, service, and maintenance must be performed by a qualified service technician.
2. 120 Volts may cause serious injury from electric shock. Disconnect electrical power before starting installation or servicing. Leave power disconnected until installation/service is completed. This control is not a 120 Volt (line voltage) device.

CAUTION

1. Read all instructions before beginning installation.
2. Do not use in pool applications. Pool chemicals can damage the control.
3. Do not use solvents or cleaners on or near the display and circuit board. Chemicals can damage components.

TABLE OF CONTENTS

Safety Instructions	1	System Checkout	
Overview	3	Power Up	15
Specifications	3	Test Mode	17
Location Recommendations	4	Humidity/Dryness Level Setting	17
Installation		Offset	17
Mount Control	5	Turning On and Setting the Control ...	18
Replacing a 1730A		Sequence of Operation	
Manual Dehumidistat	6	External Control	19
Wiring to 1730A	8	Remote Control	19
Wiring to 1710A/1750A/1770A		Troubleshooting	
External Control	9	Error Codes	
Wiring to 1830/1850/1870		External Control	20
External Control	10	Remote Control	20
Wiring to 1710A/1750A/1770A		Troubleshooting Guide	23
Remote Control	12		
Wiring to 1830/1850/1870			
Remote Control	13		

OVERVIEW

The Aprilaire® Model 76 Dehumidifier Control provides control of the dehumidifier from the living space.

The control can be installed as an EXTERNAL CONTROL, allowing the homeowner to set and adjust the humidity setting and turn dehumidification on or off from a convenient location. In this application, the Model 76 uses an onboard sensor to monitor the relative humidity (%RH) in the space in which it is located and displays the measured relative humidity on the digital display.

The control can also be installed to function as a REMOTE CONTROL if the dehumidifier is located where it is not easy or convenient to access. This option is only available with Aprilaire Dehumidifier Models 1710A, 1750A, 1770A, 1830, 1850 and 1870. The control can be installed in any location within the living space, with the dehumidifier installed in the area to be dehumidified, such as a crawl space, sealed attic, or basement. The dryness level is set on the control and communicated to the dehumidifier. The dehumidifier communicates the measured relative humidity in the space being dehumidified back to the Model 76 Control where it is displayed on the digital display.

SPECIFICATIONS

ELECTRICAL	External	Remote
Input Voltage and Current	Voltage: 24VAC +/-20% Current: 25mA (nominal), 50mA (max.) at 24VAC	Voltage: 9VDC (supplied by dehumidifier control board)
Output	Dry Contact, Normally Open	Communication

CONTROL	External	Remote
Control Range	40% – 80% RH	1 (less dry) – 7 (more dry) 65°F – 40°F Dew Point
Accuracy	+/-5% RH	See Dehumidifier Specifications
Differential	3%	
Low Limit	40°F Dew Point	50°F Dry Bulb
High Limit	99°F Dry Bulb	105°F Dry Bulb

LOCATION RECOMMENDATIONS

As a REMOTE CONTROL, the Model 76 can be mounted wherever is convenient for the homeowner.

Follow the recommendations below when installing the Model 76 as an EXTERNAL CONTROL.


MOUNT CONTROL

- In an area the homeowner wants to monitor and control moisture levels.
- On an interior wall.
- Approximately 5' off the floor.
- At least 18" from an outside wall.

DO NOT MOUNT CONTROL

- **In the flow of a supply register.**
 - Behind doors, in corners or other dead air spaces.
 - In direct sunlight, near lighting fixtures, or other appliances that give off heat.
- On an outside or unconditioned area wall.
- In stairwells or near outside doors.
- On a wall with concealed pipes or ductwork.

FIGURE 1 – Mounting Control

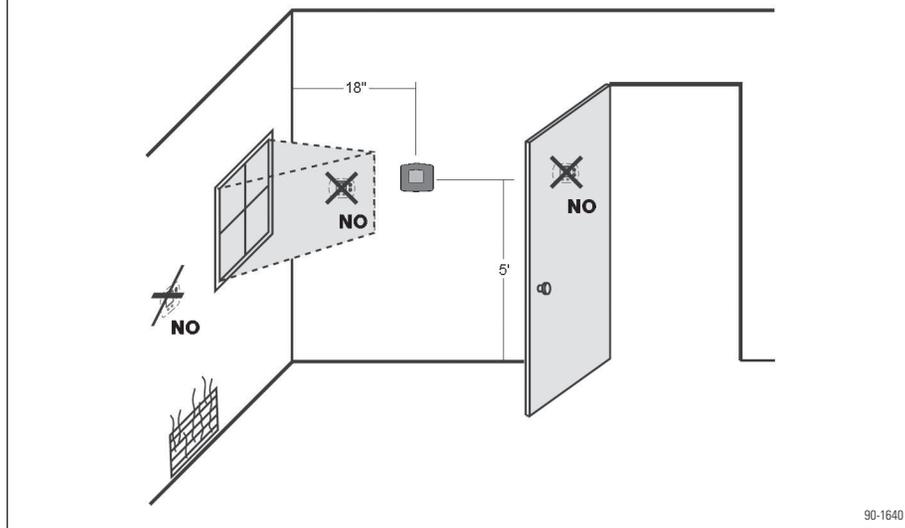


90-1640

INSTALLATION

MOUNT CONTROL


If replacing a control mounted in the living space, see **Control Mounted in Living Space** on page 6.

FIGURE 2 – Disassemble Control

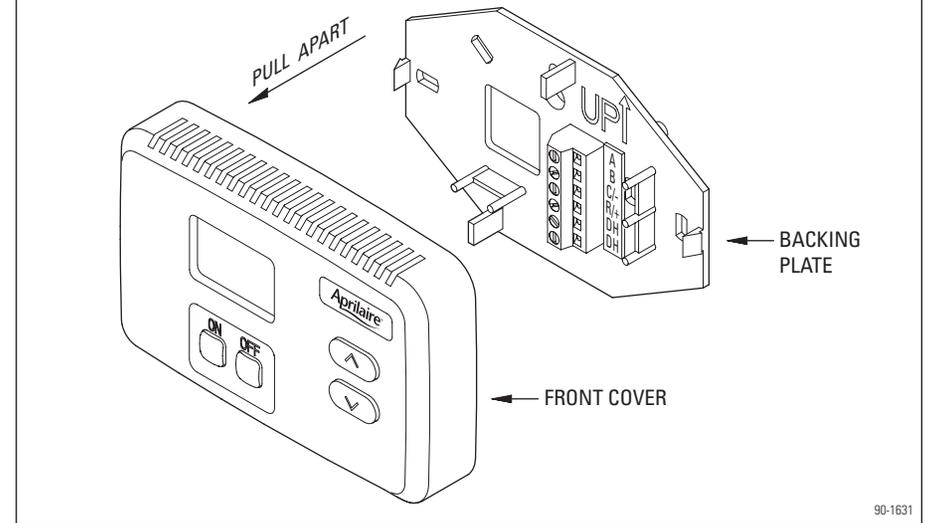

90-1631

FIGURE 3 – Mount Backing Plate

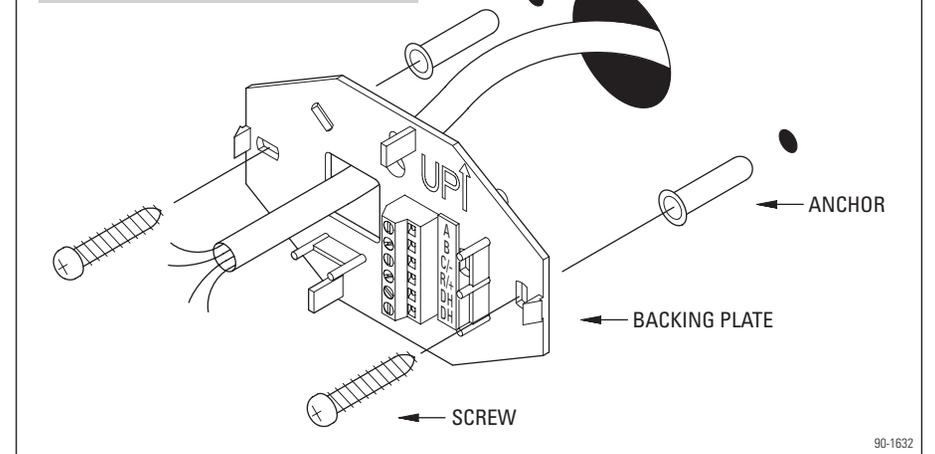

90-1632

REQUIRED COMPONENTS

- 18 – 24 gauge wire (field supplied) – 4 wires required, run new cable as needed.
- (2) #8 x 1-1/2" mounting screws (supplied)
- (2) Anchors (supplied)

1. Level the backing plate on the wall and mark the mounting holes and wire access location on the wall.
2. Drill two 3/16" mounting holes and a 3/4" wire access hole. See **Figure 3**.
3. Install the drywall anchors flush with the wall surface. **Note:** Mounting holes on the backing plate are designed to fit on a horizontal J-box.
4. Run a 4-wire cable from the dehumidifier to the wall mount location and through the square hole in the backing plate.
5. Secure the backing plate to the wall using the two #8 x 1-1/2" screws.


REPLACING A 1730A MANUAL DEHUMIDISTAT

STEP 1 – REMOVE THE CURRENT MANUAL CONTROL

IF THE MANUAL CONTROL IS MOUNTED IN THE LIVING SPACE:

1. **Disconnect power to the dehumidifier and HVAC system.**
2. Pull knob from the dehumidistat cover and remove cover from the control base.
3. Remove the four screws from the base plate.
4. Pull the dehumidistat off the wall until wire nuts are exposed.
5. Remove dehumidistat leads.
6. The existing 2-wire cable can remain. The Model 76 wiring requires 4 wires. Install more wires as needed.
7. Mount the Model 76 control following steps 1-5 in the **MOUNT CONTROL** section above. Reuse the existing wire access hole and wiring as needed.
8. Connect the existing wires (from 1730A **REMOTE** terminals) to the **DH** terminals and connect the remaining two wires to the **C/-** and **R/+** terminals on the Model 76 backing plate.
9. Push excess cable into the wire access hole and fill the hole with insulation. **Note:** Failure to seal the hole can cause drafts to enter the control and affect sensing accuracy.
10. Proceed to **WIRING** section on page 8.

FIGURE 4 – Manual Dehumidistat

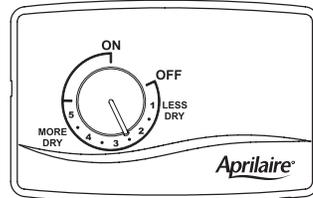

IF THE MANUAL CONTROL IS MOUNTED ON A 1730A DEHUMIDIFIER:

NOTE: The Model 76 is installed in the living space and not on the dehumidifier. See **LOCATION RECOMMENDATIONS** on page 4.

1. **Disconnect power to the dehumidifier and HVAC system.**
2. Pull knob from the dehumidistat cover and remove cover from the control base.
3. Remove the four screws from the base plate and pull the dehumidistat off the unit until 4"–6" of wire is outside of the unit.
4. Cut the wires and use metal tape to secure the leads to the inside of the unit, preventing contact with the blower.
5. Remove the gasket from the base plate.
6. Install the insulated cover plate (Service Part 4927) and gasket over the opening, using the screws removed in step 3. See **Figure 5**.
7. Remove the wiring access panel on the outlet panel. See **Figure 6**.
8. Unplug the **REMOTE** terminals from the circuit board, remove the two wires and cut off the bare leads. Once cut, the wires may remain in the unit.
9. Replace **REMOTE** terminals on circuit board and leave wiring access panel off for Model 76 wiring.
10. Proceed to **WIRING** section on page 8.

FIGURE 5 – Inlet with Cover Plate


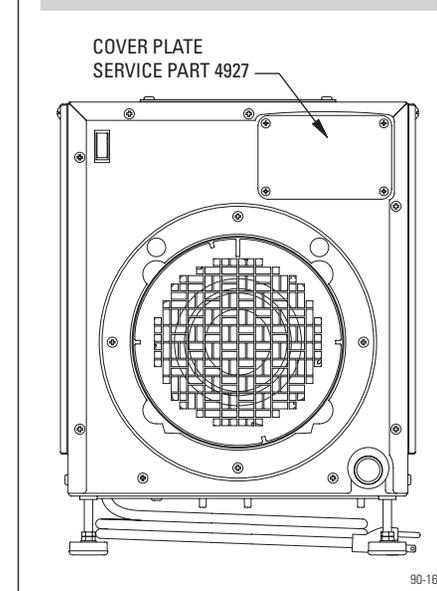


FIGURE 6 – Wiring Access Panel on Outlet

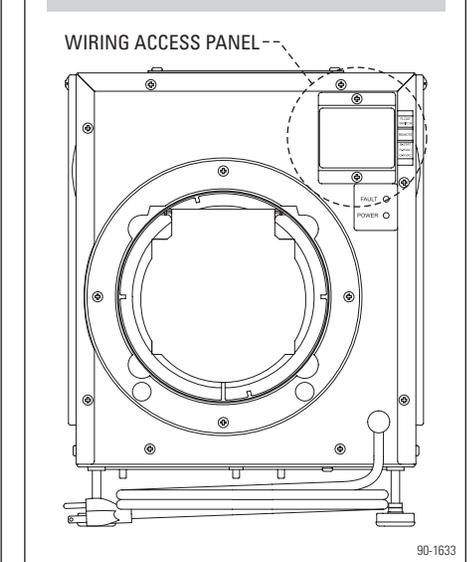

WIRING


STEP 2 – SUPPLY 24VAC TO THE MODEL 76 CONTROL

The Model 76 control requires 24VAC when installed as an **EXTERNAL CONTROL**. Pulling power from the HVAC system is the recommended method.

MODEL 76 TO 1730A

1. **Disconnect power to the dehumidifier and HVAC system.**
2. If replacing a dehumidistat that was in the living space, follow steps 3-6. If replacing a dehumidistat that was on the dehumidifier, follow steps 7-13.
3. Connect the wires from the **C/-** and **R/+** terminals on the Model 76 to the HVAC or thermostat **C** and **R** terminals.
4. Connect the existing wires connected to the **REMOTE** terminals to the **DH** terminals on the Model 76.
5. Snap the Model 76 front cover on the back plate. The 6-pin terminal aligns with the terminal block receptacle on the back plate.
6. Proceed to **SYSTEM CHECKOUT** on page 15.
7. Remove the wiring access panel (if not already removed) on the dehumidifier outlet panel.
8. Unplug the **REMOTE** terminals from the circuit board.
9. Connect the wires from the **DH** terminals on the Model 76 to the **REMOTE** terminals and plug the terminals back into the unit circuit board.
10. Connect the wires from the **C/-** and **R/+** terminals on the Model 76 to the HVAC or thermostat **C** and **R** terminals.
11. Replace the wiring access panel on the dehumidifier.
12. Snap the Model 76 front cover on the backing plate. The 6-pin terminal aligns with the terminal block receptacle on the backing plate.
13. Proceed to **SYSTEM CHECKOUT** on page 15.

FIGURE 7 – Model 76 to 1730A Wired to HVAC System

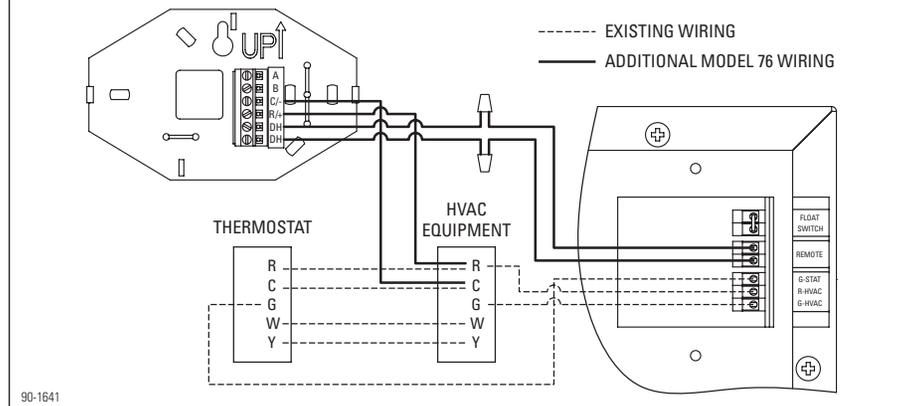


90-1641

MODEL 76 EXTERNAL CONTROL TO 1710A/1750A/1770A


1. **Disconnect power to the dehumidifier and HVAC system.**
2. Remove the control door on the dehumidifier inlet panel.
3. Connect one wire from the **DH** terminal on the Model 76 to the **DH** terminal on the control board.
4. Connect the other wire from the **DH** terminal on the Model 76 to the **Rf** terminal on the control board.
5. Connect the wires from the **C/-** and **R/+** terminals on the Model 76 to the HVAC or thermostat **C** and **R** terminals.
6. Set **SYSTEM SETUP** switch to **EXTERNAL**. See **Figure 9**.
7. Replace the control door on the dehumidifier.
8. Snap the Model 76 front cover on the backing plate. The 6-pin terminal aligns with the terminal block receptacle on the backing plate.

FIGURE 8 – Model 76 External Control to 1710A/1750A/1770A Wiring

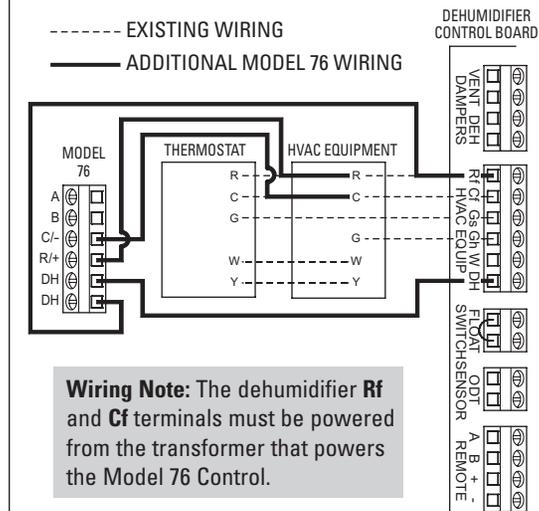

90-1537


FIGURE 9 – Model 76 External Control Dip Switch Configuration




90-1538

MODEL 76 EXTERNAL CONTROL TO 1830/1850/1870


1. **Disconnect power to the dehumidifier and HVAC system.**
2. Remove the wiring access cover next to the control on the dehumidifier. See **Figure 10**.
3. Wire the Model 76 to the dehumidifier as shown in **Figure 11**.
4. Ensure the NO/NC switch on the dehumidifier control is set to NO (see **Figure 11**).

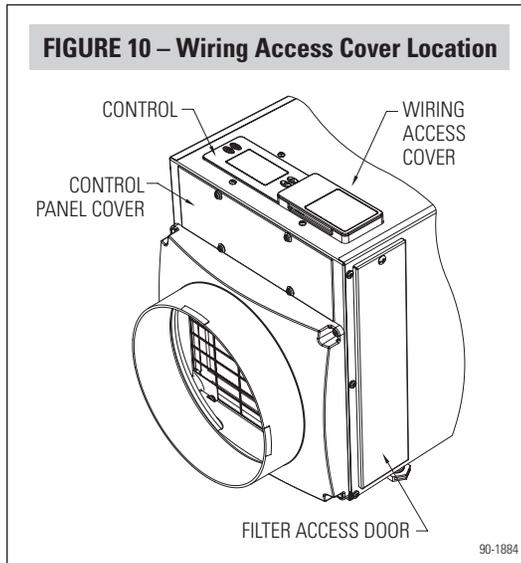


5. Snap the wiring access cover back into place, power up the dehumidifier and use the ON/OFF button to turn the unit OFF (if ON).

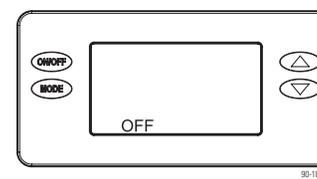

6. Press and hold the MODE button for 3 seconds to enter the Installer Set Up menu – “REMOTE DISABLED” will appear on the display when Installer Set Up is entered.
7. Repeatedly press the MODE button until “EXTERNAL DISABLED” shows on the display.
8. Press the UP or DOWN button to change to “EXTERNAL ENABLED”.

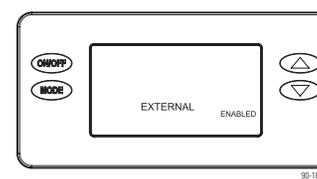

9. Repeatedly press the MODE button until “DONE” appears on the display.

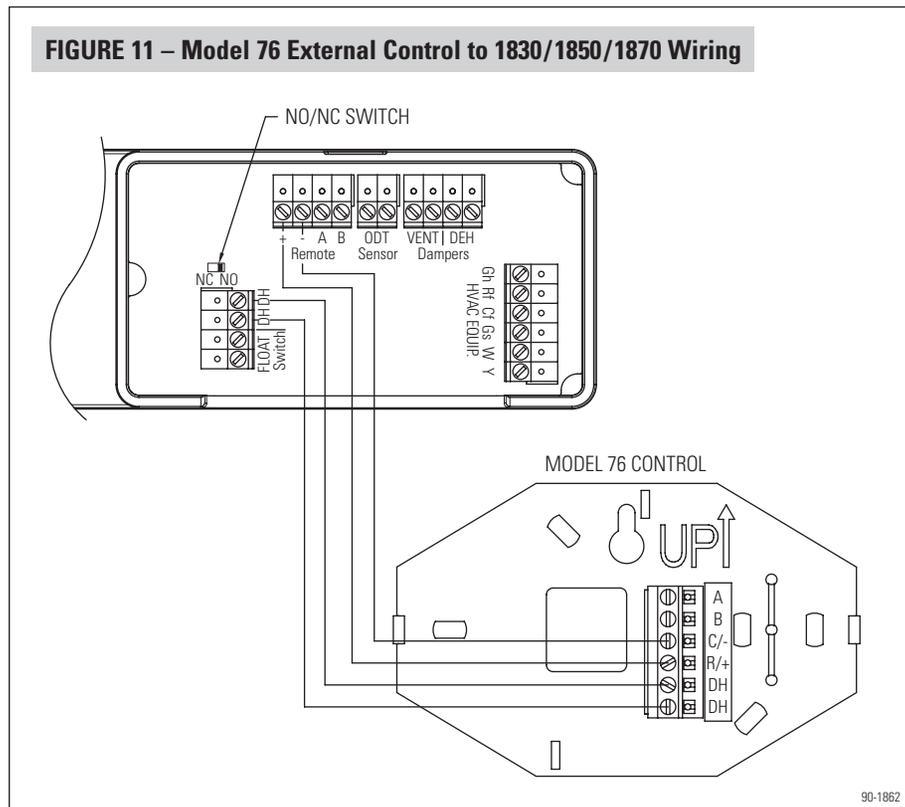

MODEL 76 REMOTE CONTROL TO 1710A/1750A/1770A

1. Disconnect power to the dehumidifier and HVAC system.
2. Remove the control door on the dehumidifier inlet panel.
3. Connect one wire from the **A** terminal on the Model 76 to the **A** terminal on the control board.
4. Connect one wire from the **B** terminal on the Model 76 to the **B** terminal on the control board.
5. Connect one wire from the **R/+** terminal on the Model 76 to the **+** terminal on the control board.
6. Connect one wire from the **C/-** terminal on the Model 76 to the **-** terminal on the control board.
7. Set **SYSTEM SETUP** switches to **LOCAL** and **PRIMARY**, See **Figure 13**.
8. Replace the control door on the dehumidifier.
9. Snap the Model 76 front cover on the backing plate. The 6-pin terminal aligns with the terminal block receptacle on the backing plate.

FIGURE 12 – Model 76 Remote Control to 1710A/1750A/1770A Wiring


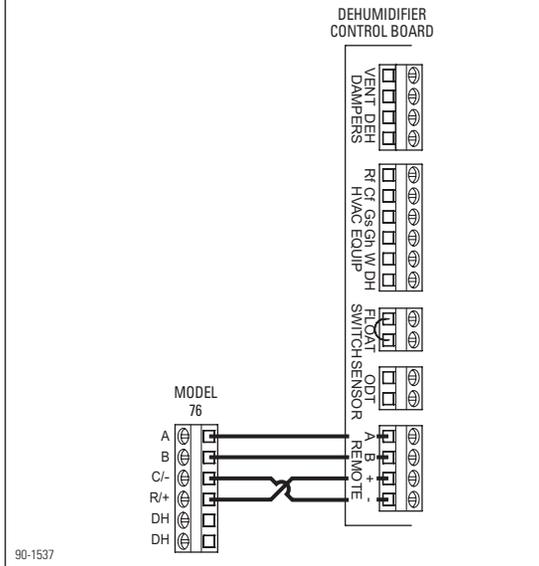


FIGURE 13 – Model 76 Remote Control Dip Switch Configuration

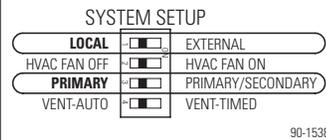


90-1538

MODEL 76 REMOTE CONTROL TO 1830/1850/1870


1. Disconnect power to the dehumidifier and HVAC system.
2. Remove the wiring access cover next to the control on the dehumidifier. See **Figure 14**.
3. Wire the Model 76 to the dehumidifier as shown in **Figure 15**.

FIGURE 14 – Wiring Access Cover Location

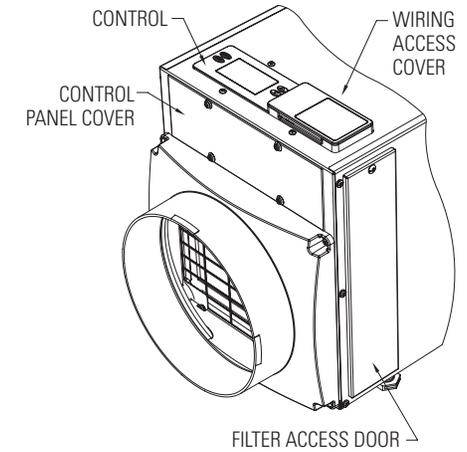


90-1884

FIGURE 15 – Model 76 Remote Control to 1830/1850/1870 Wiring

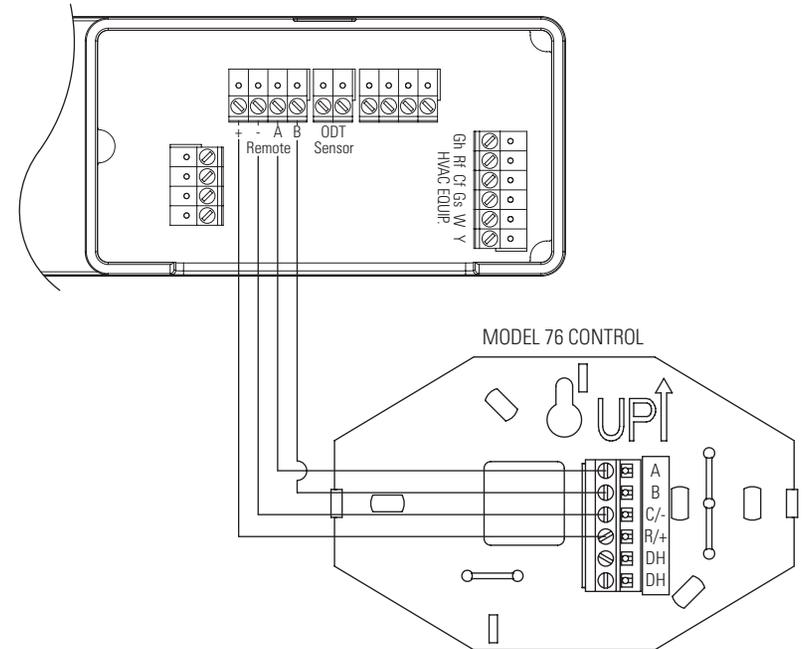


90-1860

4. Snap the wiring access cover back into place, power up the dehumidifier and use the ON/OFF button to turn the unit OFF (if ON).

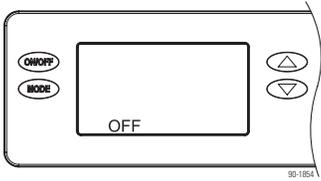

5. Press and hold the MODE button for 3 seconds to enter the Installer Set Up menu – “REMOTE DISABLED” will appear on the display when Installer Set Up is entered.

6. Press the UP or DOWN button to change to “REMOTE ENABLED”.

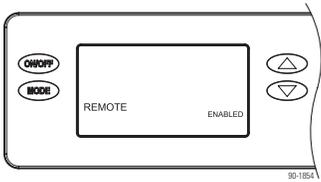


7. Press the MODE button and “DONE” will appear on the display.

SYSTEM CHECKOUT

POWER UP


1. Check all wiring.
2. Plug in dehumidifier and restore power to the HVAC system.
3. Turn on/off switch on dehumidifier ON. After a 4 second start up sequence all buttons on the Model 76 will be functional.
 - The control will be OFF.
 - The humidity setting will be 60% if wired for EXTERNAL CONTROL. The dryness level will be set to 3 if REMOTE CONTROL.
 - The control will display the measured humidity.
 - EXTERNAL CONTROL displays humidity measured by the **control** in it's installed space.
 - REMOTE CONTROL displays humidity measured by the **dehumidifier** in it's installed space.

FIGURE 16 – External Control

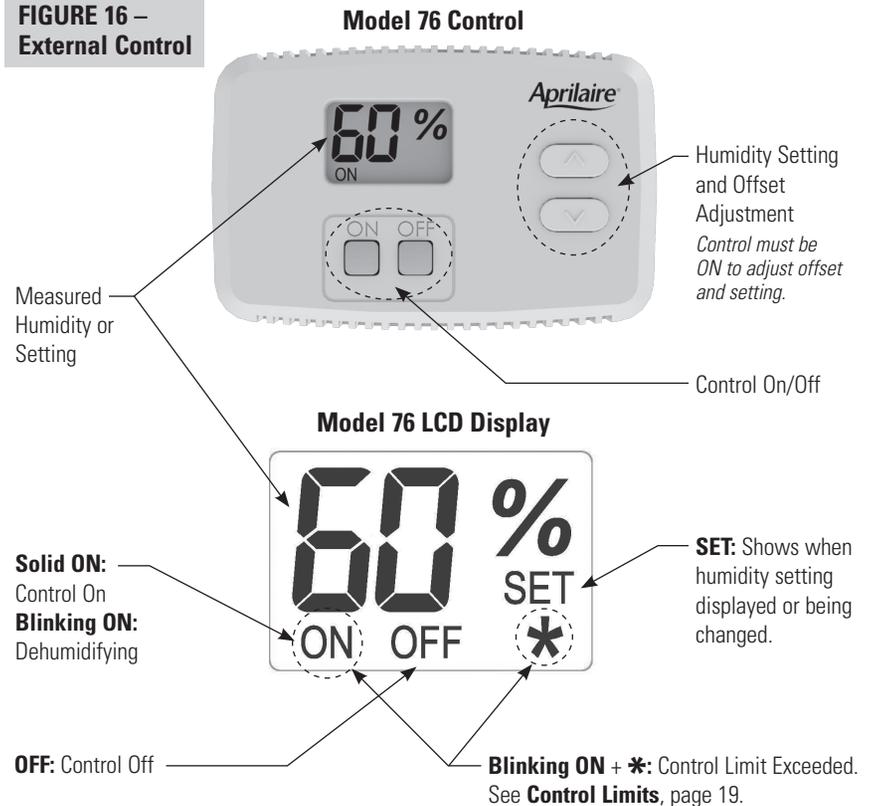

90-1636

FIGURE 17 – Remote Control

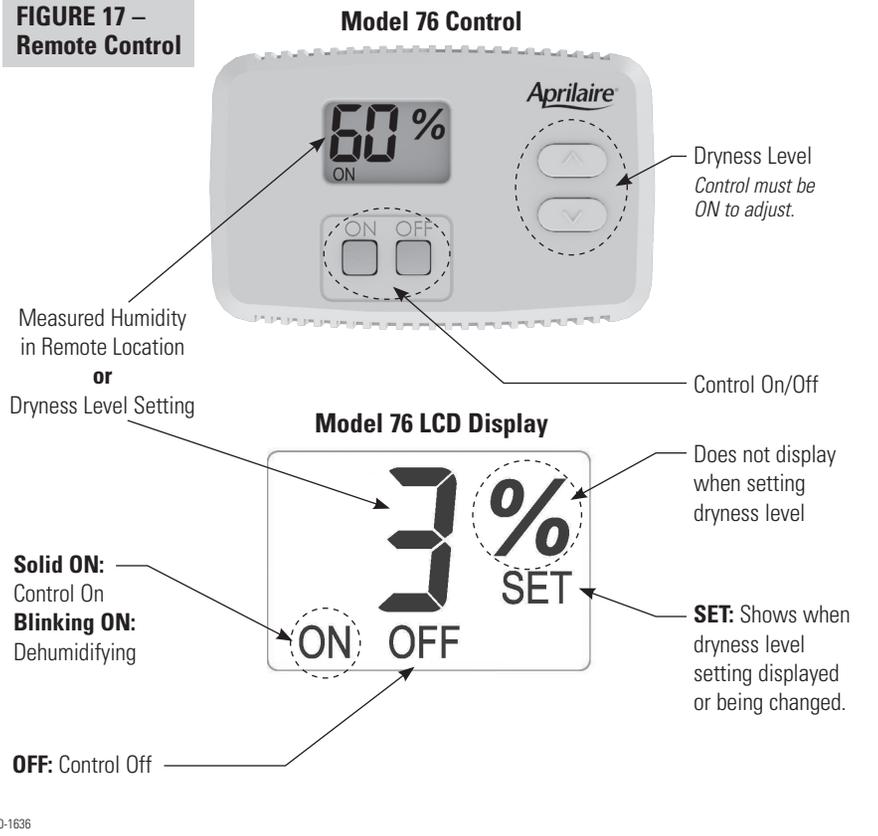

TEST MODE

- Press and hold the ON button for 5 seconds to enter Test Mode.
 - Verify the measured humidity is displayed on the Model 76 screen.
 - Verify dehumidifier turns on, and **ON** blinks on the Model 76 screen.
 - Verify the * is displayed on the Model 76 screen when wired as a REMOTE CONTROL.
- After 5 minutes or after pressing the OFF button, the control will enter Off mode.
 - Verify the dehumidifier turns off.

HUMIDITY/DRYNESS LEVEL SETTING

- The control must be ON to adjust the humidity or dryness level setting.
- The ▲ (up) and ▼ (down) buttons are used to increase or decrease the setting.
- The first press of either button will display the current setting and **SET** on the LCD display.
- Each subsequent push of the up or down buttons will change the setting by 1% or 1 dryness level.
- If a button is held down, the setting will continually change by 1% or 1 dryness level every 1/2 second for as long as the button is pressed.
- The control will return to Normal Mode, displaying the measured humidity, 5 seconds after the last button press/release.

OFFSET

When the Model 76 is installed as an EXTERNAL CONTROL, an offset can be applied to the humidity reading to avoid discrepancies with other humidity measuring devices in the home. Allow 48 hours for the control to acclimate before applying an offset. The control must be ON to enter the Offset screen.

NOTE: This feature is not available when the control is installed as a REMOTE CONTROL.

- Press and hold the OFF button for 5 seconds to enter the Offset screen.
- The ▲▼ buttons can be used to set an offset value between -5% RH and +5% RH.
- The control will return to Normal Mode, displaying the measured humidity, 5 seconds after the last button press/release.

FIGURE 18 – Offset Screen



TURNING ON AND SETTING THE CONTROL

EXTERNAL CONTROL

1. Press the ON button.
2. Use the ▲▼ buttons to set the control at 59%.
 - ▲ Increasing the humidity setting will decrease dehumidifier run time, allowing for higher humidity levels.
 - ▼ Decreasing the humidity setting will increase dehumidifier run time, allowing for lower humidity levels.

REMOTE CONTROL

1. Press the ON button.
2. Use the ▲▼ buttons to set the control to a 3 dryness level.
 - ▲ Increasing the dryness level will increase dehumidifier run time, allowing for lower humidity levels.
 - ▼ Decreasing the dryness level will decrease dehumidifier run time, allowing for higher humidity levels.

The dryness level settings can be approximated to relative humidity (%RH) using **Table 1**.

Dryness Level Setting	Indoor Temperature (°F)			
	65	70	75	80
1		84%	71%	60%
2	86%	73%	61%	52%
3	74%	63%	53%	45%
4	64%	54%	45%	39%
5	55%	46%	39%	33%
6	47%	39%	33%	28%
7	40%	34%	28%	24%

Note: This table is for reference only.

SEQUENCE OF OPERATION

EXTERNAL CONTROL

Normal Mode

- When the measured humidity is greater than the setting, the control will activate the dehumidifier output, the dehumidifier will begin dehumidifying and ON will blink on the LCD display.
- When the measured humidity falls 3% below the setting, the control will deactivate the dehumidifier output, the dehumidifier will stop dehumidifying and the LCD will display a solid ON.

Control Limits

- If the control measures a dew point below 40°F OR a temperature above 99°F, the control will deactivate the dehumidifier output if actively dehumidifying, the dehumidifier will stop dehumidifying, and **ON** and ***** will blink on the LCD screen.
- The control will resume normal operation when the measured dew point is greater than 45°F or the measured temperature is below 94°F, whichever control limit was exceeded.

REMOTE CONTROL

Normal Mode

- Once during every Cycle Period (set by the dip switches in the dehumidifier) the dehumidifier blower and dehumidifier damper output will turn on and sample the air in the area served by the dehumidifier. Sampling will also occur whenever the dryness level setting is increased on the Model 76 Control.
- After three minutes, the dew point of the incoming air is measured and compared to the dryness level set on the Model 76 Control. If the dew point of the incoming air is above the setting, the compressor turns on and ON will flash on the Model 76 screen.
- The dew point of the incoming air is continuously monitored during compressor operation. When the dew point of the incoming air falls below the dryness level setting, the dehumidifier compressor and blower will turn off and ON will stop flashing on the Model 76 screen.

Control Limits

The control limits are determined by the dehumidifier.

- If the dehumidifier senses incoming air below 50°F or above 105°F, the dehumidifier will stop compressor operation if actively dehumidifying and ON will stop flashing on the Model 76 screen.
- The dehumidifier will resume normal operation when the measured incoming air to the dehumidifier is between 55°F and 100°F.

TROUBLESHOOTING

Technical Support is available Monday through Friday, 7:00 a.m. to 5:00 p.m. CST, at (800) 334-6011. Use the guide on the following page to help find and correct system faults. Contact Technical Support before replacing the control or for additional troubleshooting.

ERROR CODES

EXTERNAL CONTROL

When the control detects an internal error, it will stop controlling, deactivate the dehumidifier output, and the LCD will display the Error Code. See **Figure 19**. The control will attempt to recover from the error every 10 minutes. The Error Code will continue to be displayed as long as the error condition exists. Button presses are not registered when in Error Mode. Cycling power to the control will not clear the code and the control will need to be replaced.

FIGURE 19 – External Control Error Code Screen



90-1645

REMOTE CONTROL

When there is a dehumidifier or control communication fault, all dehumidifier outputs will turn off and the Model 76 LCD will display an Error Code. See **Figure 20** for an example. The faults can either be critical or non-critical. Any fault will result in all dehumidification outputs turning off. A critical fault is cleared by repairing the fault and cycling power using the on/off switch on the dehumidifier. A non-critical fault is cleared by repairing the fault and cycling power to the dehumidifier is not required. See **Table 2** for the error codes and required action.

FIGURE 20 – Remote Control Error Code Screen



90-1645

TABLE 2 – Error Codes

Error Code	Failure Mode	Action	Reset
E1	Internal Humidity or Temperature Sensor Open or Shorted	<ol style="list-style-type: none"> 1. Check the connection between the sensor board and control board. 2. If connection okay, replace sensor board, Part No. 5460. 	Cycle Power
E2	High Refrigeration Pressure	<ol style="list-style-type: none"> 1. Verify that the fan works, the backflow damper swings freely and there is no blocked or restricted ductwork. 2. If the fault persists, call Technical Support. 	Cycle Power
E3	Model 76 Remote Control Communication Loss	<ol style="list-style-type: none"> 1. Check connections between Model 76 and dehumidifier control board. Terminals should be fully inserted and secured in the control board and Model 76 control terminals. 2. If connections are correct and secure, turn off the dehumidifier and remove the Model 76. Use a short section of 4-wire cable to reconnect the Model 76 to the control board. Turn the dehumidifier back on and increase the dryness level setting on the Model 76. If the dehumidifier turns on, the problem is with the wiring between the dehumidifier and control. 3. If the dehumidifier does not turn on, call Technical Support. 	Self-Correcting
E4	Insufficient Capacity	<ol style="list-style-type: none"> 1. Check the frost sensor connection at the power board. Terminal should be fully seated on the power board pins. 2. Remove the side access panel and verify that the sensor is secured to the suction line. 3. If the sensor is connected and secured to the refrigeration line proceed to the next step. 4. Reset the fault by cycling power to the dehumidifier. 5. Turn the humidity setting down (below room/home humidity level) to make a dehumidification call. 6. Allow the fan and compressor to run for approximately 10-15 minutes and then enter diagnostic test mode by simultaneously pressing the UP ARROW and MODE buttons for 3 seconds. The LCD will display the temperature measured by the internal sensor while also displaying AIR SAMPLING and ON, the humidity measured by the internal sensor while also displaying %RH and ON, and the frost sensor temperature while also displaying ON. Scroll through these values and by using the UP/DOWN arrow buttons. 7. Record values and call Technical Support. 	Cycle Power

Error Code	Failure Mode	Action	Reset														
E5	High Temperature Thermistor Failure	<ol style="list-style-type: none"> 1. Check the high temperature sensor connection at the power board. Terminal should be fully seated on the power board pins. 2. Remove the side access panel and verify the sensor is not damaged and connected to the refrigeration line coming from the compressor. 3. If the sensor is connected and secured to the refrigeration line, contact Technical Support. 	Cycle Power														
E6	Low Temperature Thermistor Failure	<ol style="list-style-type: none"> 1. Check the low temperature sensor connection at the power board. 2. Remove the side access panel and verify the sensor is not damaged and connected to the suction line. 3. If the sensor is connected and secured to the refrigeration line, contact Technical Support. 	Cycle Power														
E7	Float Switch Open	<ol style="list-style-type: none"> 1. Empty the condensate pan. 2. Check the float switch connection at the control board. 3. If not using a float switch, verify jumper is between float switch terminals on dehumidifier control board. 4. If the problem persists, replace the float switch. 	Self-Correcting														
E8	Inlet Air Temperature Out of 50°F – 104°F or dew point below 40°F	<ol style="list-style-type: none"> 1. Verify all ductwork is properly sealed. 2. If no signs of leak points, contact Technical Support. 	Self-Correcting														
E9	Outdoor Temperature Sensor Open or Shorted	<ol style="list-style-type: none"> 1. Check the sensor connection at the power board. 2. Remove the wires from the terminals and measure the resistance. An short circuit will have a resistance very close to 0 Ohms and an open circuit will have a very very high resistance. The table below can be used to approximate the resistance based on outdoor temperature. <table border="1" data-bbox="405 1175 787 1411"> <thead> <tr> <th>Outdoor Temperature</th> <th>Resistance</th> </tr> </thead> <tbody> <tr> <td>0°F</td> <td>84,500 Ohms</td> </tr> <tr> <td>20°F</td> <td>46,000 Ohms</td> </tr> <tr> <td>40°F</td> <td>26,000 Ohms</td> </tr> <tr> <td>60°F</td> <td>15,500 Ohms</td> </tr> <tr> <td>80°F</td> <td>9,500 Ohms</td> </tr> <tr> <td>100°F</td> <td>6,000 Ohms</td> </tr> </tbody> </table> 3. If the sensor is not reading correctly, replace the sensor, Part No. 8052. 	Outdoor Temperature	Resistance	0°F	84,500 Ohms	20°F	46,000 Ohms	40°F	26,000 Ohms	60°F	15,500 Ohms	80°F	9,500 Ohms	100°F	6,000 Ohms	Self-Correcting
Outdoor Temperature	Resistance																
0°F	84,500 Ohms																
20°F	46,000 Ohms																
40°F	26,000 Ohms																
60°F	15,500 Ohms																
80°F	9,500 Ohms																
100°F	6,000 Ohms																

Symptom	Possible Reason	Troubleshooting Procedure
No power to the control.	Incorrect wiring.	Verify wiring connections between control, dehumidifier and HVAC system (where applicable).
	No power to dehumidifier.	<ul style="list-style-type: none"> • Verify that the dehumidifier power switch is ON. • Verify the circuit breaker has not tripped.
	No power to HVAC equipment.	<ul style="list-style-type: none"> • Verify HVAC system switch is on. • Verify the circuit breaker has not tripped.
Control does not turn on dehumidifier output.	Incorrect wiring.	Verify wiring connections between control and dehumidifier.
Blank display or missing segments during Test mode.	LCD error.	Replace control.
Display shows Er.	Control detected an internal error.	The control will need to be replaced.
Display shows E1-E9.	Dehumidifier or communication error.	Use Table 2 to troubleshoot fault.
Inaccurate humidity reading when using External Control .	Control recently installed after being stored in an uncontrolled temperature and humidity environment.	Allow 48 hours for control to acclimate.
	Offset has been applied to the humidity reading.	Change the offset.
	Control is mounted in direct sunlight, above a heat or humidity source, or in the path of a supply register.	Relocate the control.



P.O. Box 1467 • Madison, WI 53701-1467 • Phone: 800/334-6011 • Fax: 608/257-4357

www.aprilairepartners.com

10009850 11.13
B2205738B

Printed in U.S.A.
© 2013 Aprilaire – A division of Research Products Corporation