



## Installation Instructions

Part No: OA3-SRT\*\*SA-D20S

### CONTENTS

<b>Safety Consideration.....</b>	<b>1</b>
<b>General Descriptions.....</b>	<b>1</b>
<b>Installation.....</b>	<b>1-5</b>
<b>Controller Setup.....</b>	<b>6</b>
<b>Minimum Damper Position Setup.....</b>	<b>7</b>
<b>Sequence of Operation.....</b>	<b>14</b>
<b>Wiring Diagram.....</b>	<b>17</b>

### SAFETY CONSIDERATIONS

Installation of this accessory can be hazardous due to system pressures, electrical components and equipment, and equipment locations (such as a roof or elevated surface). Only trained qualified installers and service technicians should install, start-up, and service this equipment.

When installing this accessory, observe precautions in the literature and on any labels attached to the equipment and all other safety precautions may apply.

- Follow all safety codes.
- Wear safety glasses and work gloves.
- Use care in handling and installing the accessory.

It is important to recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, CAUTION, and NOTE. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices, which **may** result in minor personal injury or product and property damage.

NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

#### **WARNING**

##### **ELECTRICAL SHOCK HAZARD**

Failure to follow this warning could cause personal injury or death. Before performing service or maintenance operations on the unit, always turn off main power switch to unit and install lock(s) and lockout tag(s). Unit may have more than one power switch. Ensure electrical service to rooftop unit agrees with voltage and amperage listed on the unit rating plate.

#### **CAUTION**

##### **CUT HAZARD**

Failure to follow this caution may result in personal injury. Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing roof top units.

#### **CAUTION**

Failure to follow this caution may result in personal injury and damage to the unit. Cover the duct opening as a precaution so objects cannot fall into the return duct opening. Be sure to remove the cover when installation is complete.

DAMPER PART NUMBER	RTU SIZE	RTU FOOTPRINT SIZE
OA3-SRT12SA-D20S	2-6 Tons (small Cabinet)	46-3/4" X 74-3/8"
OA3-SRT34SA-D20S	7.5-12.5 Tons (large cabinet)	58-1/2" X 88-1/8"
OA3-SRT05SA-D20S	12.5-15 Tons (extra large cabinet)	63-3/8" X 115-7/8"

### GENERAL

The 3-position outdoor air package can be used in either a vertical or horizontal airflow configuration. The damper actuator is controlled by the Honeywell W7220 economizer logic. The minimum positions are set via the economizer controller from 2-10 Vdc.

### INSTALLATION

1. Turn off unit power supply and install lockout tag. For Gas units, also turn off the gas supply.

2. Determine the quantity of ventilation air required for the served space. Record the percent of outside air required for use in **CONTROLLER SETUP** (See page 6.)


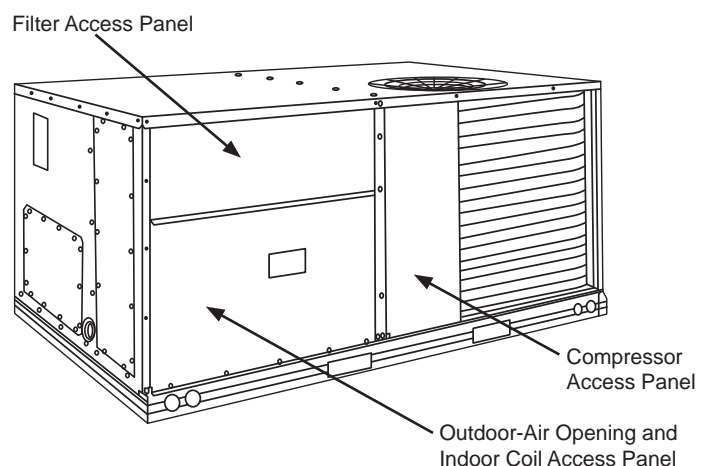



Fig. 1 Rooftop unit panels  
(2-6 Ton unit shown)

**IMPORTANT:** Read these instructions completely before attempting to install accessory damper.

3. Filter access panel may be held in place with a triangular tab and screw. Loosen screw and turn tab out of the way of the panel. Remove filter access panel by raising panel and swinging panel outward. Panel is now disengaged from track and can be removed. Set aside for re-installation later. Remove the outdoor-air opening/indoor coil access panel and discard. (See Fig. 1)
4. Assemble outside-air hood top, sides and divider as shown in Fig. 2 and Fig. 3 (some hoods may ship assembled). Do not install hood at this time.

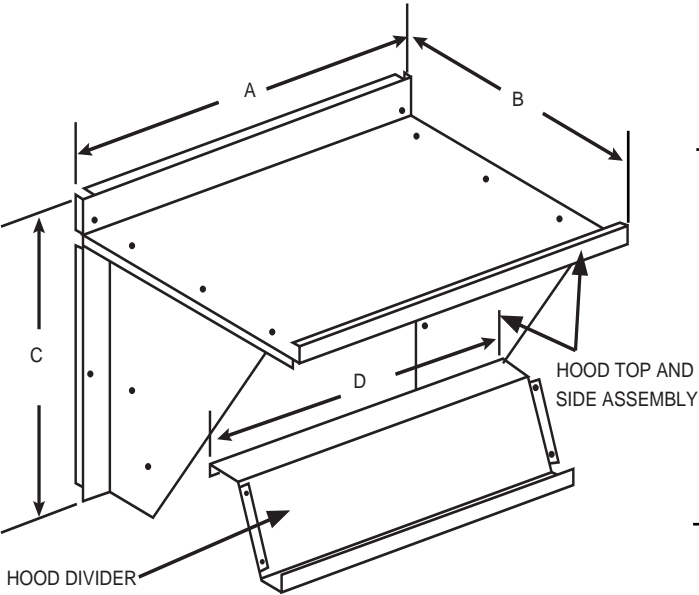

**Fig. 2 Assembled Hood  
(OA3-SRT12SA-D20S & OA3-SRT34SA-D20S)**

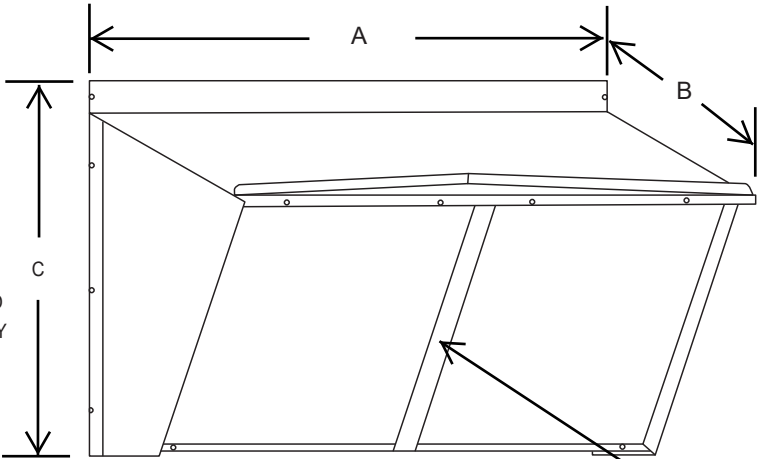

**Fig. 3 Assembled Hood  
(OA3-SRT05SA-D20S)**

**Table 3. Damper hood dimensions**

DAMPER PART NUMBER	A (in.)	B (in.)	C (in.)	D (in.)	SHIP WT. (lb)
OA3-SRT12SA-D20S	30.37	17.43	19.05	29.50	40 lb
OA3-SRT34SA-D20S	40.37	22.28	24.48	36.27	47 lb
OA3-SRT05SA-D20S	52.92	27.03	33.41	46.92	53 lb

NOTE: The OA3-SRT05SA-D20S hood has 2 aluminum filters and a hood filter divider that installs between the filters.




**Fig. 4 Assembled Hood**



**Fig. 5 Insulated Bottom Panel**

5. Install galvanized insulated bottom panel per Fig.5 with the slot at the top of the panel. The lip of the slot should fit behind the corner post as shown. Screw in place.

6. Lift damper assembly and set in place over the top of the bottom panel, per Fig.6. Secure the damper assembly in place with provided screws.

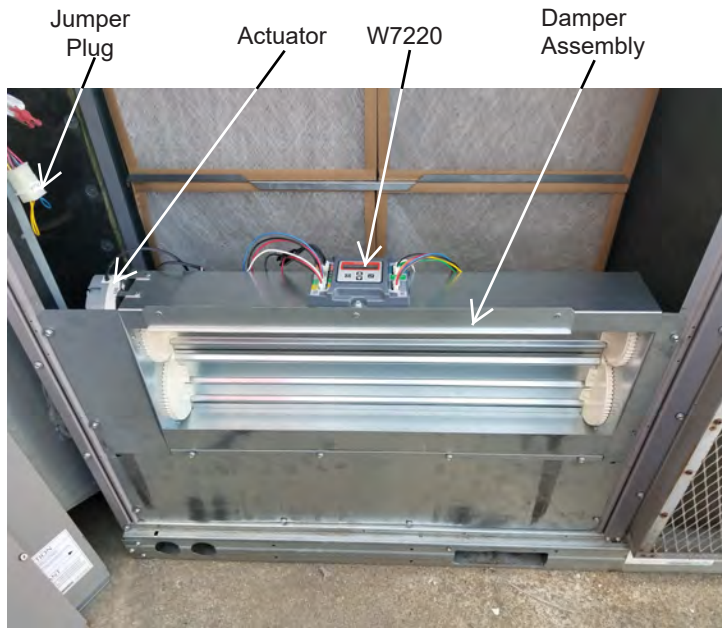

**Fig. 6 Damper Assembly W/ W7220**

7. Remove the jumper plug (See Fig. 6) shipped attached to the economizer harness in the HVAC unit. DO NOT DISCARD. Connect the 12-pin plug from the W7220 controller to the economizer plug in the HVAC unit. (See Fig. 7) Set the jumper plug aside in case it is determined, at a later date, that the damper is no longer required, at which time the jumper plug can be reinstalled.

8. Locate the white W1 wire bundle with a fork terminal end. This wiring is leaving AUX2-I from the W7220 controller. This wire should be routed across the unit into the blower section. (See Fig. 8) Follow the wiring from the 12-pin RTU harness to where it crosses the corner of the filter rack. Push the white W1 wire through the opening.




**Fig. 7 Connect the 12-Pin Economizer Plug**



**Fig. 8 Route W1 wire to blower section.**

9. Remove the indoor blower access panel and the unit control box outer and inner panel. (See Fig. 9)

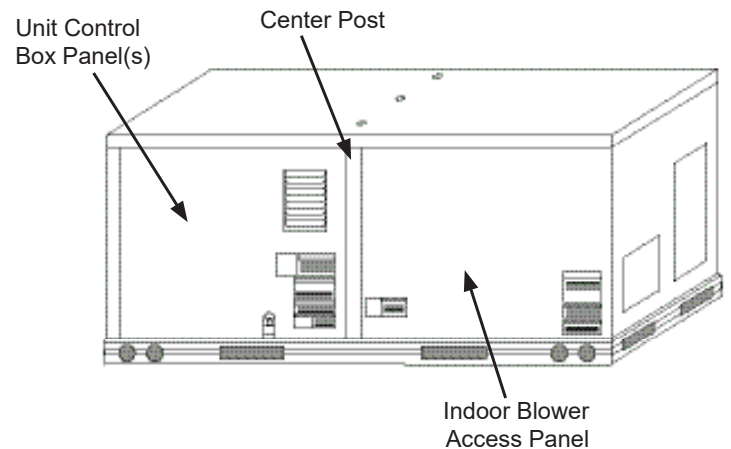

**Fig. 9 Typical Access Panel Locations**





**Fig. 10 Route white W1 wire through blower section.**

9. Locate the wire you just pushed through the harness opening. (See Fig. 10) Pull enough wire to route to the unit control box.



**Fig. 11 Route W1 wire through divider into control box**

10. Loosen grommet and slide wire through the divider between the control box and the indoor blower section. Push the grommet back into the opening. (See Fig. 11)

11. Pull enough wire through the divider to make connection on the unit Central Terminal Board (See Fig. 12)


12. Land the W1 wire on the W1 screw terminal on the unit's Central Terminal Board. (See Fig. 13)

13. Re-attach the control box panels. Ensure the white wire just run is secured out of the way, so it will not cause any issues when the unit is in operation, then re-attach the indoor blower access panel.



**Fig. 12 Route white W1 wire to unit control box**

W1  
OUTPUT

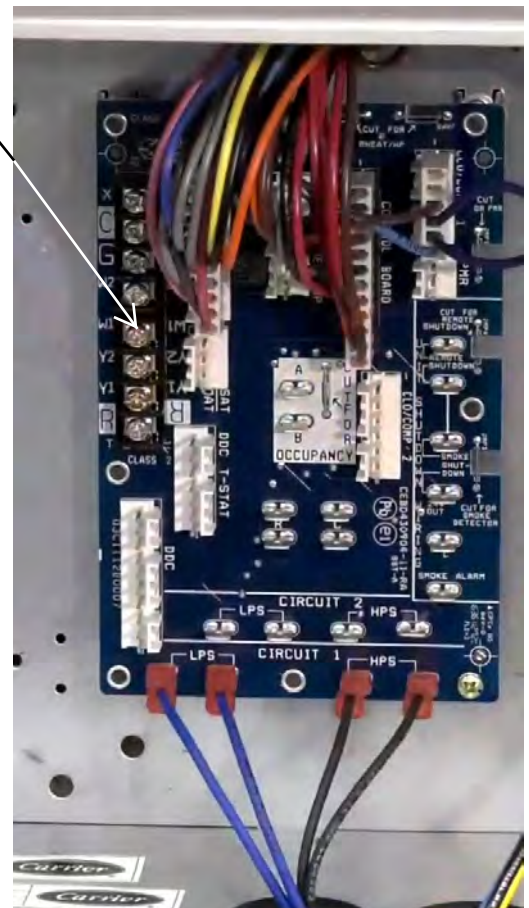

**Fig. 13 Land white W1 wire on W1 screw terminal**

11. Install the provided aluminum filter into the hood. Lock in place with top filter clips. (See Fig. 14)
12. Install the hood over the damper and insulated blank-off panel. (See Fig. 15)
13. Re-attach the top filter access panel. (See Fig. 16) (Leave panel off for **CONTROLLER SETUP** [page 6] and replace when finished)
14. Remove lockout tag and restore RTU operation.
15. Follow **CONTROLLER SETUP** (page 6) and **MINIMUM DAMPER POSITION SETUP** (page 7) to modify W7220 default settings and ensure proper minimum ventilation.

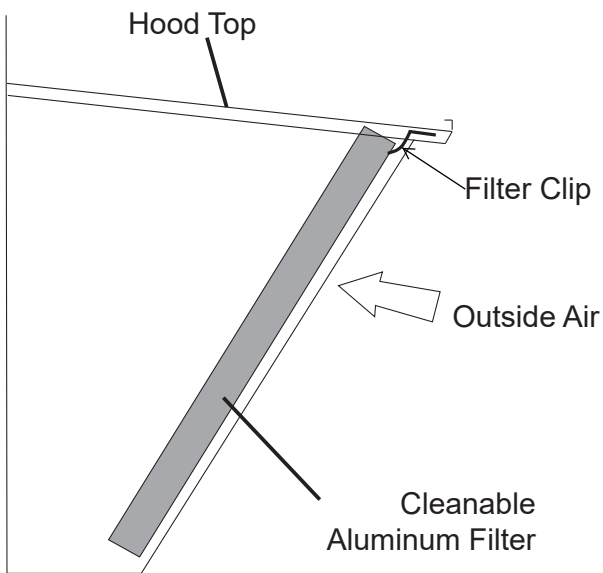


Fig. 14 Filter installation



Fig. 16 Filter access panel installation



Fig. 15 Hood installation

# CONTROLLER SETUP

## for OA3-SRT\*\*SA-D20SS

The Honeywell W7220 is pre-mounted to the outside air damper assembly, see Fig. 6. Your RTU will need to have power in order to operate the controller. Ensure no high voltage wiring is around the damper or controller when beginning this process.



This product doesn't include temperature sensors. The temperature inputs provided are 10k ohm resistors to prevent the controller from returning sensor faults. This will produce a constant value of approximately 105° F for the Outside Air and Mixed Air. The controller will show a sensor fault if one of these resistors becomes defective. If actual readings are preferred, you may replace with 20k ohm NTC sensors.

Before beginning the setup, familiarize yourself with the Honeywell W7220 **INTERFACE OVERVIEW** on the following pages (See Page 9.)



### Setup Sequence

It is important to establish the operating parameters the system will be operating at prior to making any changes. MENU – i.e. Number of RTU/AHU fan speeds, with/without CO<sub>2</sub> (DCV), etc. and have all sensors installed and operational before attempting the setup sequence.




#### Single Speed Fan and No DCV (CO<sub>2</sub>)

1. After power up scroll down ▼ to SYSTEM SETUP
2. Enter the SYSTEM SETUP MENU and enter the install date, if desired.
3. Scroll down ▼ to AUX2 IN – Change Shutdown (SD) to Heat (W1)
4. Scroll down ▼ to OCC- occupancy, always set to INPUT.
5. Press  (MENU UP/EXIT)
6. Scroll up ▲ to SETPOINTS and press ENTER
7. Scroll down ▼ MIN POS for minimum position setting. (see **MINIMUM DAMPER POSITION SETUP** on the next page)
8. Press  (MENU UP/EXIT) – Setup is complete.

### 2-Speed Fan

1. After power up, scroll down ▼ to SYSTEM SETUP
2. Enter the SYSTEM SETUP MENU and enter the install date.
3. Scroll down ▼ to AUX2 IN – Change Shutdown (SD) to Heat (W1)
4. Scroll down ▼ to Fan Speed – Change from 1 Speed to 2 Speed.
5. Scroll down ▼ to OCC- occupancy, always sent to INPUT.
6. Press  (MENU UP/EXIT)
7. Scroll down ▼ to ADVANCED SETUP if DCV option is being used (See DCV (CO<sub>2</sub>) below).
- If not:
8. Scroll up ▲ to and enter SETPOINTS
9. Scroll down ▼ to MIN POS H (high speed) and MIN POS L (low speed) for minimum position settings. (see **MINIMUM DAMPER POSITION SETUP** on the next page)
10. Press  (MENU UP/EXIT) – Setup is complete.

### DCV (CO<sub>2</sub>)

1. After power up, scroll down ▼ to SYSTEM SETUP for install date. If previously in SYSTEM SETUP for Fan Speed Setup, scroll down ▼ to ADVANCED SETUP.
2. Enter ADVANCED SETUP and scroll down ▼ to CO<sub>2</sub> ZERO. Set the Zero Value (2Vdc) to match the CO<sub>2</sub> Sensor. See CO<sub>2</sub> Setup on Page 5 for example.
3. Scroll down ▼ to CO<sub>2</sub> SPAN. Set the Span to match the CO<sub>2</sub> Sensor. See CO<sub>2</sub> Setup for example.
4. Press  (MENU UP/EXIT)
5. Scroll up ▲ to SETPOINTS and press  ENTER
6. Scroll down ▼ to DCV SET to set the CO<sub>2</sub> setpoint.
7. Scroll down ▼ to VENT MAX H (high speed) and VENT MAX L (low speed), and VENT MIN H (high speed) and VENT MIN L (low speed) for minimum position settings.
8. Press  (MENU UP/EXIT) – Setup is complete.

**Table 4. MicroMetl Jade W7220 Controller Configuration**

		FOR SINGLE SPEED UNIT		FOR 2 SPEED UNITS		Note
Controller Menu Item		Default	Set To:	Default	Set To:	
SETPOINTS	MAT SET	53°F	NA	53°F	NA	Setting not used for 3-position damper
	LOW T LOCK	32°F	NA	32°F	NA	Setting not used for 3-position damper
	DRYBLB SET	63°F	NA	63°F	NA	Setting not used for 3-position damper
	MIN POS	2.8 Vdc	2 to 10 Vdc	NA	NA	Only displayed if set up for single speed unit
	MIN POS H	NA	NA	2.8 Vdc	2 to 10 Vdc	Only displayed if set up for 2 speed unit
	MIN POS L	NA	NA	3.2 Vdc	2 to 10 Vdc	Only displayed if set up for 2 speed unit
SYSTEM SETUP	INSTALL	1/1/2010	Current date	1/1/2010	Current date	
	EQUIPMENT	CONV	CONV	CONV	CONV	Always set to CONV, even on HP units
	AUX2 I	SD	W1	SD	W1	Always set to W1
	FAN TYPE	1 speed	1 speed	1 speed	2 speed	
	OCC	INPUT	INPUT	INPUT	INPUT	Always set to INPUT

**Note 1:** For 2 speed unit, under SYSTEM SETUP: EQUIPMENT= CONV, AUX2 I = W1, and FAN TYPE = 2 SPEED

NA = Not applicable



## ***Minimum Damper Position Setup***

The following details how to adjust the MIN POS set point (Single Speed unit) or MIN POS L and MIN POS H (Two Speed unit) to allow the proper amount of outdoor air, as required by local codes, to enter the building if an airflow measuring hood is not available. Make minimum position adjustments with at least 10°F temperature difference between the outdoor-air and return-air temperatures. The minimum damper position maintains the minimum airflow for the building space during the occupied period when demand control ventilation is not being used.

To determine the minimum position setting, perform the following procedure:

1. Calculate the appropriate mixed air temperature using the following formula:

$$(TO \times OA/100) + (TR \times RA/100) = TM$$

TO = Outdoor-Air Temperature

OA = Percent of Outdoor Air

TR = Return-Air Temperature

RA = Percent of Return Air

TM = Mixed-Air Temperature

As an example, if DCV is not being used and local codes require 10% outdoor air during occupied conditions, outdoor-air temperature is 60°F, and return-air temperature is 75°F.  $(60 \times 0.10) + (75 \times 0.90) = 73.5^\circ\text{F}$

2. Take temperature readings of the Return air and the Outdoor temperature. Use the formula above to determine what your target mixed air temperature reading should be. This procedure should be performed with all the hoods and panels assembled and fastened to the unit to simulate unit operation conditions.

3. Put a temperature probe in the indoor fan section of the unit (a probe that you can remotely read, with the unit panel attached, is ideal.)

4. Make note of what the current MIN POS (default is 2.8V) for Single Speed unit or for a Two Speed unit make note of what the current MIN POS L (default is 3.2V) and MIN POS H (default is 2.8V) voltages are currently set at on the W7220 controller.

5. Turn the unit on and run the indoor fan. Cut the signal to the compressor(s) to ensure the coil will not affect the mixed air temperature. Also, ensure an occupied signal is being sent to the W7220 controller, so the damper will move to minimum position. For Two Speed units this procedure will need to be done with the unit fan in Low speed (requires an input to Y1-I) and High speed (requires an input to Y1-I and Y2-I.)

6. Take your reading of the Mixed Air and see whether you need to open (increase voltage) or close (decrease voltage) the damper to achieve the desired mixed air temperature.

7. You can remove the filter access panel from the unit, make the adjustment on the controller to MIN POS (Single Speed unit), MIN POS L (Two Speed unit low speed), or MIN POS H (Two Speed unit high speed), replace the filter access panel and take temperature reading again. Continue this process until you reach the target temperature. For Two Speed units ensure you adjust both set points: MIN POS L when indoor fan is running at low speed and MIN POS H when indoor fan is running at high speed.

## HONEYWELL CO<sub>2</sub> SETUP EXAMPLE

When using any CO<sub>2</sub> sensor be sure the sensor scale and the JADE W7220 scale are the same. For example, as shipped, the MicroMetl 8002-WMDM (Honeywell C7232) scale is 500 – 1500 ppm with an output range of 2-10Vdc. The W7220 control default is 0-2000 ppm and 2-10Vdc input. When using the C7232 with the W7220 you will need to set the sensor span to match the W7220 or vice versa. See Fig. 17 and Tables 5 & 6 for the sensor jumper configurations.

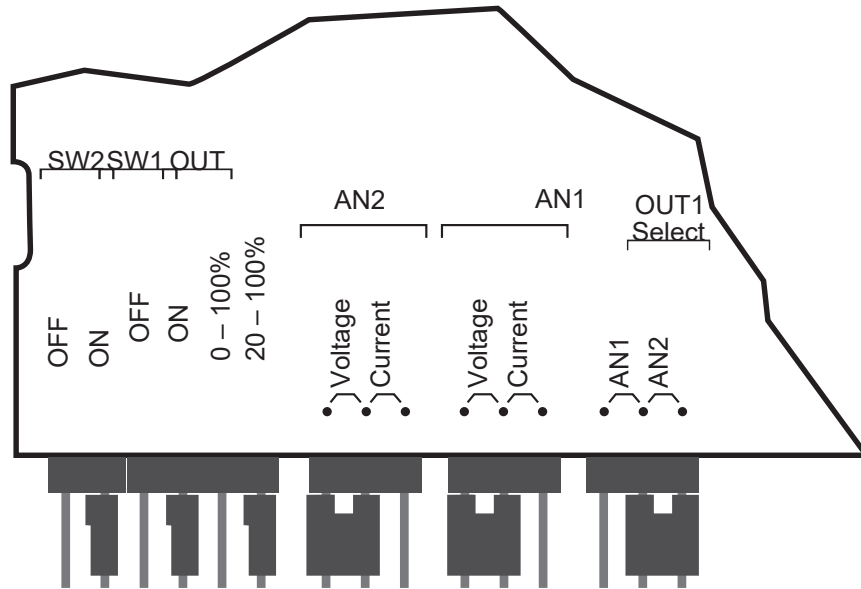


Fig. 17. Honeywell C7232 Jumper Configuration

SW1	SW2	AN (ppm)	Relay <sup>a</sup> (ppm)
ON	ON	0 to 1000	1000
ON	Off	0 to 2000	1200
Off	On	500 to 1500	800
Off	Off	500 to 2000	1200

<sup>a</sup> When the level reaches this value, the contacts close; when the level drops 100ppm below this value, the contacts open.

Table 5. Honeywell C7232 Switch ppm Output Configuration

AN	OUT	
	0-100%	20-100%
Voltage	0-10Vdc	2-10Vdc
Current	0-20 mA	4-20 mA

Table 6. Honeywell C7232 Voltage/Current Output Configuration



# INTERFACE OVERVIEW

This section describes how to use the W7220 user interface for:

- Keypad and menu navigation
- Settings and parameter changes
- Menu structure and selection

## User Interface

The user interface consists of an LCD display and a 4-button keypad on the front of the Economizer module. The LCD is a 16 character by 2 line dot matrix display.

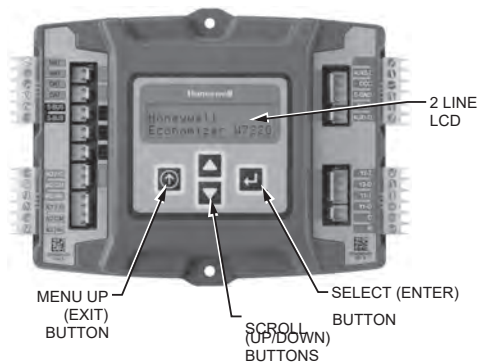


Fig. 18 Economizer LCD and Keypad Layout.

## Keypad

The four navigation buttons illustrated in Fig. 18 are used to scroll through the menus and menu items, select menu items, and to change parameter and configuration settings.

## Using the Keypad with Menus

To use the keypad when working with menus:

- Press the ▲ button to move to the previous menu.
- Press the ▼ button to move to the next menu.
- Press the ↵ button (Enter) to display the first item in the currently displayed menu.
- Press the ⬆ button (Menu up) to exit a menu's item and return to the list of menus.

## Using the Keypad with Settings and Parameters

To use the keypad when working with Setpoints, System and Advanced Settings, Checkout tests, and Alarms:

- Navigate to the desired menu.
- Press the ↵ button (Enter) to display the first item in the currently displayed menu.
- Use the ▲ and ▼ buttons to scroll to the desired parameter.
- Press the ↵ button (Enter) to display the value of the currently displayed item.

- Press the ▲ button to increase (change) the displayed parameter value.<sup>a</sup>
- Press the ▼ button to decrease (change) the displayed parameter value.<sup>a</sup>
- Press the ↵ button to accept the displayed value and store it in non-volatile RAM.
- CHANGE STORED displays.

- Press the ⬆ button (MenuUp/Exit) to return to the previous menu.

<sup>a</sup> When values are displayed, pressing and holding the ▲ or ▼ button causes the display to automatically increment.

## Menu Structure

Tables 7-10 on pages 10-13 illustrates the complete hierarchy of menus and parameters for the W7220 control system.

The Menus in display order are:

- STATUS
- SETPOINTS
- SYSTEM SETUP
- ADVANCED SETUP
- CHECKOUT
- ALARMS

### IMPORTANT

*Your menu parameters will be different depending on your configuration.*

*For example if you do not have a DCV (CO<sub>2</sub>) sensor, then none of the DCV parameters appear and only MIN POS will display. If you have a CO<sub>2</sub> sensor, the DCV MIN and DCV MAX will appear AND if you have 2 speed fan DCV MIN (high and low speed) and DCV MAX (high and low speed) will appear.*

# SETUP AND CONFIGURATION

Before being placed into service, the JADE™ W7220 controller must be setup and configured for the installed system.

### IMPORTANT

*During setup, the Economizer module is live at all times.*

The setup process uses a hierarchical menu structure that is easy to use. You press the ▲ and ▼ arrow buttons to move forward and backward through the menus and press the ↵ button to select and confirm setup item changes.

## Time-out and Screensaver

When no buttons have been pressed for 10 minutes, the LCD displays a screen saver, which cycles through the Status items. Each Status item displays in turn and cycles to the next item after 5 seconds.

**Table 7. Menu Structure<sup>a</sup>**

<b>Menu</b>	<b>Parameter</b>	<b>Parameter Default Value</b>	<b>Parameter Range and Increment<sup>b</sup></b>	<b>Notes</b>
<b>STATUS</b>	ECON AVAIL	NO	YES/NO	The 3-position damper will never enter economizer mode.
	ECONOMIZING	NO	YES/NO	The 3-position damper will never enter economizer mode.
	OCCUPIED	NO	YES/NO	YES = OCC signal received from space thermostat or unitary controller. YES = 24 Vac on terminal OCC No = 0 Vac on terminal OCC.
	HEAT PUMP	n/a	COOL HEAT	Do not use. Always set controller to CONVENTIONAL.
	COOL Y1-IN	OFF	ON/OFF	Y1-I signal from space thermostat or unitary controller for cooling stage 1. ON = 24 Vac on term Y1-I OFF = 0 Vac on term Y1-I
	COOL Y1-OUT	OFF	ON/OFF	Signal not sent by controller. Signal is routed back to the RTU within the wiring harness.
	COOL Y2-IN	OFF	ON/OFF	Y2-I signal from space thermostat or unitary controller for second stage cooling. ON = 24 Vac on term Y2-I OFF = 0 Vac on term Y2-I
	COOL Y2-OUT	OFF	ON/OFF	Signal not sent by controller. Signal is routed back to the RTU within the wiring harness.
	MA TEMP	___. °F	-40 to 150 °F	The 3-position damper will always display an approximate temperature of 105° F, unless sensors are installed.
	DA TEMP	___. °F	-40 to 150 °F	The 3-position damper doesn't use a DA sensor.
	OA TEMP	___. °F	-40 to 140 °F	The 3-position damper will always display an approximate temperature of 105° F, unless sensors are installed.
	OA HUM	__ %	0 to 100%	This will not be displayed on the 3-position damper, unless sensors are installed.
	RA TEMP	___. °F	0 to 140 °F	This will not be displayed on the 3-position damper, unless sensors are installed.
	RA HUM	__ %	0 to 100%	This will not be displayed on the 3-position damper, unless sensors are installed.
	IN CO2	___ ppm	0 to 2000 ppm	Displays value of measured CO2 from CO2 sensor (if connected.) Not shown if CO2 not connected, short or out-of-range. See note on page 8 concerning MicroMetl 8002-WMDM (Honeywell C7632 sensor.)
	DCV STATUS	n/a	ON/OFF	Displays ON if above setpoint and OFF if below setpoint, ONLY if a CO2 sensor is connected.
	DAMPER OUT	2.0V	2.0 to 10.0 V	Displays output voltage to the damper actuator.
	EXH1 OUT	OFF	ON/OFF	The wiring is not provided with the 3-position damper to utilize this output.

**Table 8. Menu Structure <sup>a</sup> (cont)**

Menu	Parameter	Parameter Default Value	Parameter Range and Increment <sup>b</sup>	Notes
<b>STATUS (cont)</b>	EXH2 OUT	OFF	ON/OFF	EXHAUST STAGE 2 RELAY OUTPUT Output of AUX terminal; displays only if AUX = EXH2 ON = relay closed OFF = relay open
	ERV	OFF	ON/OFF	ENERGY RECOVERY UNIT RELAY OUTPUT Output of AUX terminal; displays only if AUX = ERV ON = relay closed OFF = relay open
	MECH COOL ON	0	0, 1, or 2	Displays stage of mechanical cooling that is active.
	FAN SPEED	n/a	LOW or HIGH	SUPPLY FAN SPEED Displays speed setting of fan on a 2-speed fan unit.
	W (HEAT ON)	n/a	ON/OFF	HEAT DEMAND STATUS Displays status of heat demand on a 2-speed fan unit.
<b>SETPOINTS</b>	MAT SET	53°F (12°C)	38° to 70°F; (3° to 18°C) increment by 1	MIXED AIR SETPOINT The 3-position damper will not use this setting.
	LOW T LOCK	32°F (0°C)	-45° to 80°F; (-43° to 27°C) increment by 1	COMPRESSOR LOW TEMPERATURE LOCKOUT The 3-position damper will not use this setting.
	DRYBLB SET	63°F (17°C)	48° to 80°F (9° to 27°C) increment by 1	OA DRY BULB TEMPERATURE CHANGEOVER SETPOINT The 3-position damper will not use this setting.
	ENTH CURVE	ES3	ES1, ES2, ES3, ES4, or ES5	ENTHALPY CHANGEOVER CURVE (Requires enthalpy sensor option) The 3-position damper will not use this setting.
	DCV SET	1100ppm	500 to 2000 ppm; increment by 100	DEMAND CONTROL VENTILATION SETPOINT Displays only if CO2 sensor is connected. Setpoint for Demand Control Ventilation of space. Above the setpoint, the OA dampers will modulate open to bring in additional OA to maintain a space ppm level below the setpoint.
	MIN POS	2.8 V	2 to 10 Vdc	VENTILATION MINIMUM POSITION. Only displayed if controller is set for single speed unit under FAN TYPE, and if DCV is NOT used.
	MIN POS L	3.2 V	2 to 10 Vdc	VENTILATION MINIMUM POSITION AT LOW SPEED Displays ONLY if used on 2 speed units and CO2 sensor is NOT connected.
	MIN POS H	2.8 V	2 to 10 Vdc	VENTILATION MINIMUM POSITION AT HIGH SPEED Displays ONLY if used on 2 speed units and CO2 sensor is NOT connected.
	VENTMAX L	3.2 V	2 to 10 Vdc	DCV MAXIMUM DAMPER POSITION AT LOW SPEED (Requires CO2 sensor connected)
	VENTMAX H	2.8 V	2 to 10 Vdc	DCV MAXIMUM DAMPER POSITION AT HIGH SPEED (Requires CO2 sensor connected)
	VENTMIN L	2.5 V	2 to 10 Vdc	DCV MINIMUM DAMPER POSITION AT LOW SPEED (Requires CO2 sensor connected)
	VENTMIN H	2.25 V	2 to 10 Vdc	DCV MINIMUM DAMPER POSITION AT HIGH SPEED (Requires CO2 sensor connected)
	VENTMAX	2.8 V	2 to 10 Vdc	Displays only if a CO2 sensor is connected. Used for Vbz (ventilation max cfm) setpoint. VENTMAX is the same setting as MIN POS would be if you did not have the CO2 sensor.
			100 to 9990 cfm increment by 10	If OA, MA RA and CO2 sensors are connected and DCV CAL ENABLE is set to AUTO mode, the OA dampers are controlled by CFM and displays from 100 to 9990 cfm.
			2 to 10 Vdc	With 2-speed fan units VENTMAX L (low speed fan) and VENTMAX H (high speed fan) settings are required. Default for VENTMAX L is 3.2V and VENTMAX H is 2.8V.
	VENTMIN	2.25 V	2 to 10 Vdc	Displays only if CO2 sensor is connected. Used for Va (ventilation min cfm) setpoint. This is the ventilation requirement for less than maximum occupancy of the space.
			100 to 9990 cfm increment by 10	If OA, MA RA and CO2 sensors are connected and DCV CAL ENABLE is set to AUTO mode, the OA dampers are controlled by CFM and displays from 100 to 9990 cfm.
			2 to 10 Vdc	With 2-speed fan units VENTMIN L (low speed fan) and VENTMIN H (high speed fan) settings are required. Default for VENTMIN L is 2.5V and VENTMIN H is 2.25V.

**Table 9. Menu Structure<sup>a</sup> (cont)**

Menu	Parameter	Parameter Default Value	Parameter Range and Increment <sup>b</sup>	Notes
<b>SYSTEM SETUP</b>	INSTALL	01/01/14		Display order = MM/DD/YY Setting order = DD, MM, then YY.
	UNITS DEG	°F	°F or °C	Sets economizer controller in degrees Fahrenheit or Celsius.
	EQUIPMENT	CONV	Conventional or HP	Always set to CONV even for heat pump unit.
	AUX2 IN	SHUTDOWN (SD)	HEAT (W1) required for 2-speed mode	Always set to HEAT (W1)
	FAN TYPE	1 speed	1 speed / 2 speed	Sets the economizer controller for operation of 1 speed or 2 speed indoor fan system.
	FAN CFM	5000cfm	100 to 15000 cfm; increment by 100	UNIT DESIGN AIRFLOW (CFM) Enter ONLY if using DCVCAL ENA = AUTO
	AUX OUT	NONE	NONE ERV EXH2 SYS	Select OUTPUT for AUX1 O relay NONE = not configured (output is not used) ERV = Energy Recovery Ventilator <sup>d</sup> EXH2 = second damper position relay closure for second exhaust fan SYS = use output as an FDD remote alarm signal
	OCC	INPUT	INPUT or ALWAYS	Always set to INPUT.
<b>ADVANCED SETUP</b>	MA LO SET	45°F (7°C)	35° to 55°F; (2° to 12°C) Incremented by 1°	MIXED AIR TEMPERATURE LOW LIMIT The 3-position damper will not use this setting.
	FREEZE POS	CLO	CLO or MIN	FREEZE PROTECTION DAMPER POSITION This option is not available for the 3-position damper.
	CO2 ZERO	0ppm	0 to 500 ppm; Increment by 10	CO2 ppm level to match CO2 sensor start level.
	CO2 SPAN	2000ppm	1000 to 3000 ppm; Increment by 50	CO2 ppm span to match CO2 sensor.
	STG3 DLY	2.0h	0 min, 5 min, 15 min, then 15 min intervals. Up to 4 h or OFF	COOLING STAGE 3 DELAY The 3-position damper will not use this setting.
	SD DMPR POS	CLO	CLO or OPEN	Function NOT AVAILABLE with 2-speed mode
	DCVCAL ENA	MAN	manual or auto	Turns on the DCV automatic control of the dampers. (Single speed only.)
	MATT CAL	0.0°F (or C)	+/- ---2.5°F (+/- ---1.4°C)	MIXED AIR TEMPERATURE CALIBRATION Allows for the operator to adjust for an out of calibration mixed air temperature (MAT) sensor
	OA T CAL	1.0°F (or C)	+/- ---2.5°F (+/- ---1.4°C)	OUTSIDE AIR TEMPERATURE CALIBRATION Allows for the operator to adjust for an out of calibration outside air temperature (OAT) sensor
	OA H CAL	0% RH	+/- ---10% RH	OUTSIDE AIR HUMIDITY CALIBRATION Allows for the operator to adjust for an out of calibration outside air enthalpy sensor
	RA T CAL	2.0°F (or C)	+/- ---2.5°F (+/- ---1.4°C)	RETURN AIR TEMPERATURE CALIBRATION Allows for the operator to adjust for an out of calibration return air temperature (RA) sensor
	RA H CAL	0% RH	+/- ---10% RH	RETURN AIR HUMIDITY CALIBRATION Allows for the operator to adjust for an out of calibration return air enthalpy sensor
	DA T CAL	0.0°F (or C)	+/- ---2.5°F (+/- ---1.4°C)	DISCHARGE AIR TEMPERATURE CALIBRATION Allows for the operator to adjust for an out of calibration discharge air temperature (DAT) sensor
	2SP FAN DELAY	5 Minutes	0 to 20 minutes in 1 minute increments	TIME DELAY ON 2nd STAGE ECONOMIZING The 3-position damper will not use this setting.



**Table 10. Menu Structure<sup>a</sup> (cont)**

Menu	Parameter	Parameter Default Value	Parameter Range and Increment	Notes
<b>CHECKOUT</b>	DAMPER VMIN .HS	n/a	n/a	Positions OA damper to VMIN High Speed position
	DAMPER VMAX .HS	n/a	n/a	Positions OA damper to VMAX High Speed position
	DAMPER OPEN	n/a	n/a	Positions OA damper to the full open position.
	DAMPER CLOSE	n/a	n/a	Positions damper to the fully closed position
	CONNECT Y1---O	n/a	n/a	This checkout cannot be performed with the 3-postion damper.
	CONNECT Y2---O	n/a	n/a	This checkout cannot be performed with the 3-postion damper.
	CONNECT AUX1O	n/a	n/a	This checkout cannot be performed with the 3-postion damper.
<b>ALARMS(_)</b>	Alarms display only when they are active. The menu title "ALARMS(_)" includes the number of active alarms in parenthesis ( ).			
	MA T SENS ERR	n/a	n/a	MIXED AIR TEMPERATURE SENSOR ERROR
	CO2 SENS ERR	n/a	n/a	CO2 SENSOR ERROR
	OA T SENS ERR	n/a	n/a	OUTSIDE AIR TEMPERATURE SENSOR ERROR OAT sensor connected at input terminals OAT
	OA SYLK SENS ERR	n/a	n/a	OUTSIDE AIR ENTHALPY SENSOR ERROR OAT sensor connected on S- bus
	DA T SENS ERR	n/a	n/a	DISCHARGE AIR TEMPERATURE SENSOR ERROR
	SYS ALARM	n/a	n/a	When AUX is set to SYS and there is any alarm (e.g., failed sensors, etc.), the AUX terminal has 24 Vac out.
	ACT UNDER V	n/a	n/a	ACTUATOR VOLTAGE LOW Voltage received at actuator is below expected range
	ACT OVER V	n/a	n/a	ACTUATOR VOLTAGE HIGH Voltage received at actuator is above expected range
	ACT STALLED	n/a	n/a	ACTUATOR STALLED Actuator stopped before reaching commanded position

<sup>a</sup> Table 7-10 illustrates the control hierarchy pertinent for the 3-postion damper. Additional information may be found within Honeywell document, "63-2700-10."

## Checkout Tests

Use the Checkout Menu (See Table 10) to test the damper operation.

To Perform a Checkout test:

1. Scroll to the desired test in the Checkout menu using the ▲ and ▼ buttons.
2. Press the ↵ button to select
3. RUN? appears.
4. Press the ↵ button to start
5. The unit pauses and then displays IN PROGRESS.
6. When the test is complete, DONE appears.
7. When all desired parameters have been tested, press the ⬆ (Menu up) button to end the test.

Checkout test can be performed at any time during the operation of the system as a test that the system is operable.



### CAUTION

#### EQUIPMENT DAMAGE HAZARD

Failure to follow this caution may result in damage to equipment

Be sure to allow enough time for compressor startup and shutdown between checkout tests so that you do not short-cycle the compressors.

## TROUBLESHOOTING

### Alarms

The Economizer module provides alarm messages that display on the 2-line LCD.

**NOTE:** Upon power up, the module waits 60 minutes before checking for alarms. This allows time for all the configured devices (e.g. sensors, actuator) to become operational. The exception is the MA sensor which will alarm immediately.

If one or more alarms are present and there has been no keypad activity for at least 5 minutes, the Alarms menu displays and cycles through the active alarms.

You can also navigate to the Alarms menu at any time.

### Clearing Alarms

Once the alarm has been identified and the cause has been corrected (e.g. replaced faulty sensor), the alarm can be cleared from the display.

To clear an alarm, perform the following:

1. Navigate to the desired alarm.
2. Press the ↵ button.
3. ERASE? displays.
4. Press the ↵ button.
5. ALARM ERASED displays.
6. Press the ⬆ button (MenuUp/Exit) to complete the action and return to the previous menu.

**NOTE:** If an alarm still exists after you clear it, it re-displays within 5 seconds.

# SEQUENCE OF OPERATION

**Table 11. Dry Bulb Operation No DCV (CO2 sensor) - 1 Speed Fan.**

DCV	OA Good to economize?	Y1-I	Y2-I	FAN SPD	Y1-O	Y2-O	Occupied	Unoccupied
None	No	Off	Off	High	0-v/Off	0-v/Off	MIN POS	Closed
		On	Off	High	24-v/On	0-v/Off	MIN POS	Closed
		On	On	High	24-v/On	24-v/On	MIN POS	Closed

**Table 12. Dry Bulb Operation With DCV (CO2 sensor) - 1 Speed Fan.**

DCV	OA Good to economize?	Y1-I	Y2-I	FAN SPD	Y1-O	Y2-O	Occupied	Unoccupied
Below CO2 set	No	Off	Off	High	0-v/Off	0-v/Off	VENTMIN	Closed
		On	Off	High	24-v/On	0-v/Off	VENTMIN	Closed
		On	On	High	24-v/On	24-v/On	VENTMIN	Closed
Above CO2 set	No	Off	Off	High	0-v/Off	0-v/Off	VENTMIN to VENTMAX	Closed
		On	Off	High	24-v/On	0-v/Off	VENTMIN to VENTMAX	Closed
		On	On	High	24-v/On	24-v/On	VENTMIN to VENTMAX	Closed

**Table 13. Dry Bulb Operation No DCV (CO2 sensor) - 2 Speed Fan.**

DCV	OA Good to economize?	Y1-I	Y2-I	FAN SPD	Y1-O	Y2-O	Occupied	Unoccupied
None	No	Off	Off	High	0-v/Off	0-v/Off	MIN POS L	Closed
		On	Off	High	24-v/On	0-v/Off	MIN POS L	Closed
		On	On	High	24-v/On	24-v/On	MIN POS H	Closed

**Table 14. Dry Bulb Operation With DCV (CO2 sensor) - 2 Speed Fan.**

DCV	OA Good to economize?	Y1-I	Y2-I	FAN SPD	Y1-O	Y2-O	Occupied	Unoccupied
Below set	No	Off	Off	High	0-v/Off	0-v/Off	VENTMIN L	Closed
		On	Off	High	24-v/On	0-v/Off	VENTMIN L	Closed
		On	On	High	24-v/On	24-v/On	VENTMIN H	Closed
Above set	No	Off	Off	High	0-v/Off	0-v/Off	VENTMIN L to VENTMAX	Closed
		On	Off	High	24-v/On	0-v/Off	VENTMIN L to VENTMAX	Closed
		On	On	High	24-v/On	24-v/On	VENTMIN H to VENTMAX	Closed

## Two-Speed Fan Operation

The W7220 Jade controller has the capability to work with a system using a 2-speed supply fan. The W7220 does not control the supply directly but uses the input status (See Table. 15) to determine the speed of the supply fan and controls the OA damper to the required position.

State	Fan Speed
OCC	Low
Y1	Low
Y2	High
W	High

Table 15. Fan speed input.

The W1 (heating mode) is not controlled by the W7220 but it requires the status to know where to position the OA damper for minimum position for the fan speed.

## CHECKOUT

Inspect all wiring connections at the Economizer module's terminals, and verify compliance with the installation wiring diagrams.

For checkout, review the Status of each configured parameter and perform the Checkout tests.

**NOTE:** See *INTERFACE OVERVIEW* on page 9 for information about menu navigation and use of the keypad.



## WARNING

**Electrical Shock Hazard.**

**Can cause severe injury, death or property damage.**

Disconnect power supply before beginning wiring or making wiring connections, to prevent electrical shock or equipment damage.

If any wiring changes are required, first be sure to remove power from the Economizer module before starting work. Pay particular attention to verifying the power connection (24 Vac).

## Power Up

After the module is mounted and wired, apply power.

### Initial Menu Display

On initial start up, **Honeywell** displays on the first line and **Economizer W7220** on the second line. After a brief pause, the revision of the software appears on the first line and the second line will be blank.

## Power Loss (Outage or Brownout)

All setpoints and advanced settings are restored<sup>b</sup> after any power loss or interruption.

**NOTE:** If power goes below 18 Vac, the W7220 controller module assumes a power loss and will become functional when the power returns above 18 Vac.

<sup>b</sup> All settings are stored in non-volatile flash memory

## W7220 ECONOMIZER MODULE WIRING

Use tables 16 and 17 to locate the wiring terminals for the economizer module.

**Table 16. Economizer Module - Left Hand Terminal Blocks**

Label	Type	Description
<b>Top Left Terminal Block</b>		
<b>MAT MAT</b>	20k NTC and COM	Mixed Air Temperature Sensor (Polarity insensitive connections)
<b>OAT OAT</b>	20k NTC and COM	Outdoor Air Temperature Sensor (Polarity insensitive connection)
<b>S—BUS S—BUS</b>	S—BUS (Sylk Bus)	Enthalpy Control Sensor (Polarity insensitive connection)
<b>Bottom Left Terminal Block</b>		
<b>IAQ 2—10</b>	2—10 Vdc	Air Quality Sensor Input (e.g. CO <sub>2</sub> sensor)
<b>IAQ COM</b>	COM	Air Quality Sensor Common
<b>IAQ 24V</b>	24 Vac	Air Quality Sensor 24 Vac Source
<b>ACT 2—10</b>	2—10 Vdc	Damper Actuator Output (2—10 Vdc)
<b>ACT COM</b>	COM	Damper Actuator Output Common
<b>ACT 24V</b>	24 Vac	Damper Actuator 24 Vac Source

**Table 17. Economizer Module - Right Hand Terminal Blocks**

Label	Type	Description
<b>Top Right Terminal Block</b>		
	n/a	The first terminal is not used
<b>AUX2 I</b>	24 Vac IN	Shut Down (SD) or Heat (W) Conventional only and Heat Pump Changeover (O/B) in Heat Pump mode.
<b>OCC</b>	24 Vac IN	Occupied / Unoccupied Input
<b>E - GND</b>	E—GND	Earth Ground - System Required
<b>EXH1</b>	24 Vac OUT	Exhaust Fan 1 Output
<b>AUX1 O</b>	24 Vac OUT	Programmable: Exhaust fan 2 output or ERV or System alarm output
<b>Bottom Right Terminal Block</b>		
<b>Y2—1</b>	24 Vac IN	Y2 in - Cooling Stage 2 Input from space thermostat
<b>Y2—O</b>	24 Vac OUT	Y2 out - Cooling Stage 2 Output to stage 2 mechanical cooling
<b>Y1—I</b>	24 Vac IN	Y1 in - Cooling Stage 2 Input from space thermostat
<b>Y1—O</b>	24 Vac OUT	Y1 out - Cooling Stage 2 Output to stage 2 mechanical cooling
<b>C</b>	COM	24 Vac Common
<b>R</b>	24 Vac	24 Vac Power (Hot)



# WIRING DIAGRAM

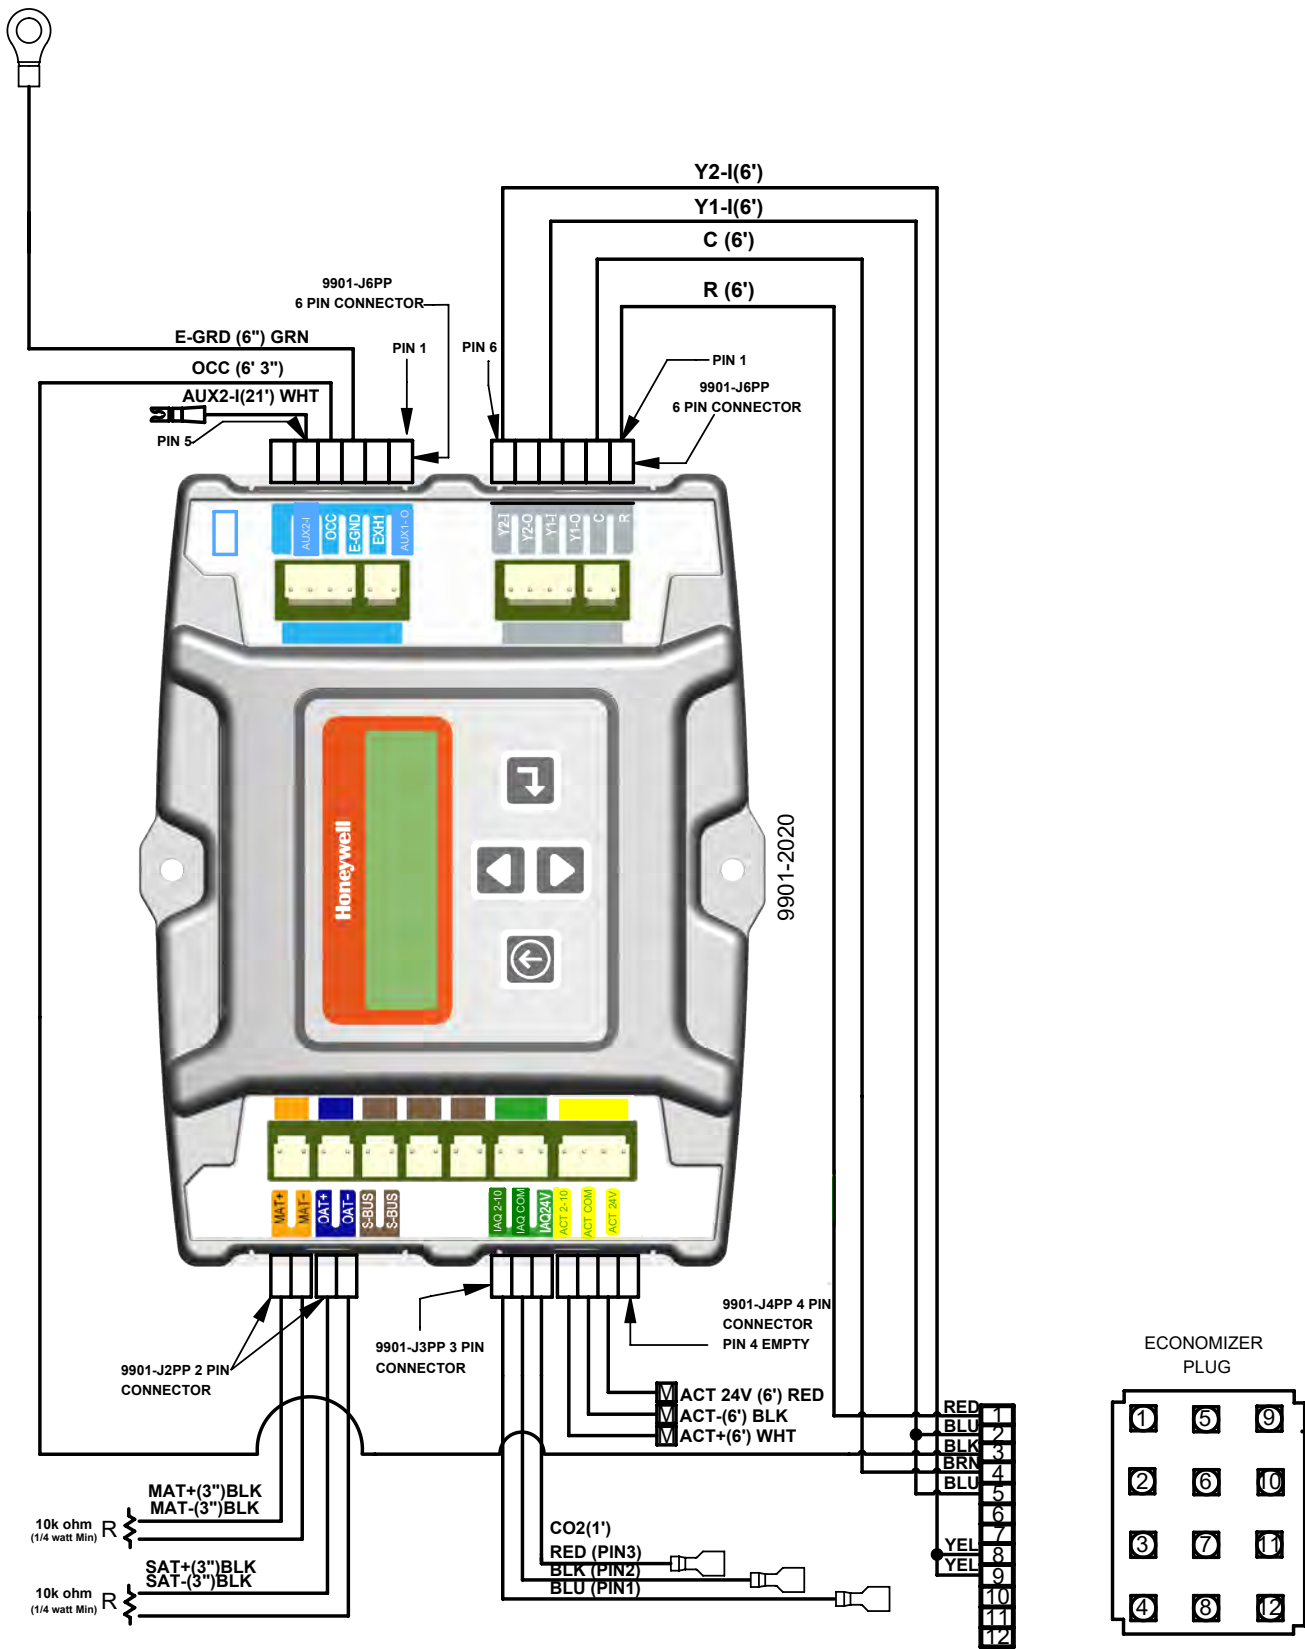


Fig 20. Wiring diagram

MicroMetl Indianapolis  
3035 N. Shadeland Ave., Suite 300  
Indianapolis, IN 46226  
1.800.MMC.HVAC (EST)  
indycustomerservice@micrometl.com

MicroMetl Longview  
201 Kodak Blvd.  
Longview, TX 75602  
1.903.248.4800 (CST)  
longviewcustomerservice@micrometl.com

MicroMetl Sparks  
905 Southern Way  
Sparks, NV 89431  
1.800.884.4662 (PST)  
sparkscustomerservice@micrometl.com