




# Model 210, 310, 410, 610, 613, 810 & 813 Media Installation

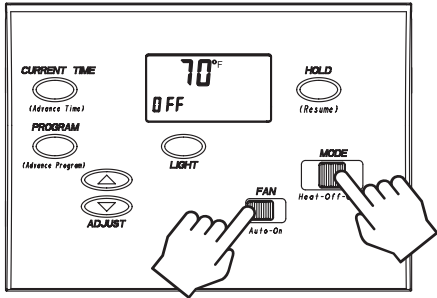


**IMPORTANT: Turn thermostat mode to OFF.  
Turn fan to AUTO.**

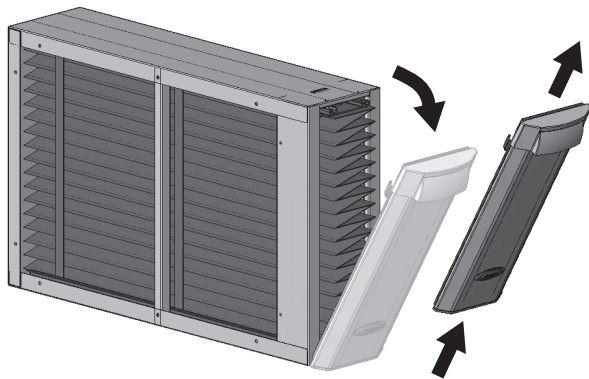

**Remove door.**


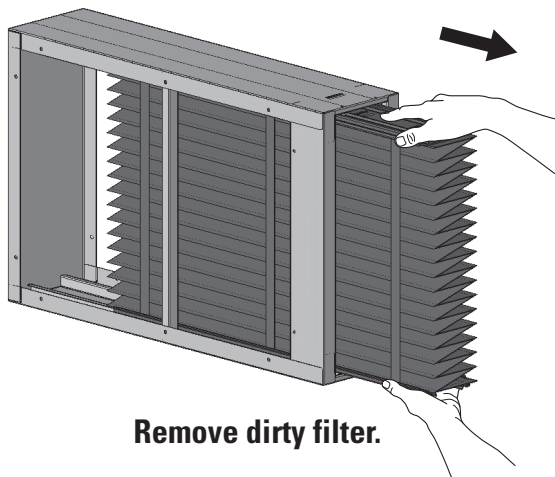


**Remove dirty filter.**

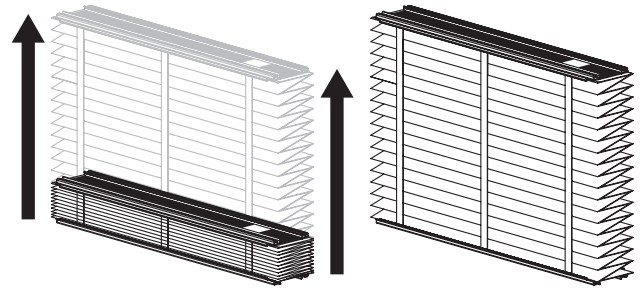


**Expand clean filter.**

Install filter with Air Flow pointing toward Furnace or Air Handler.

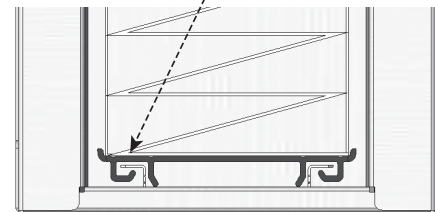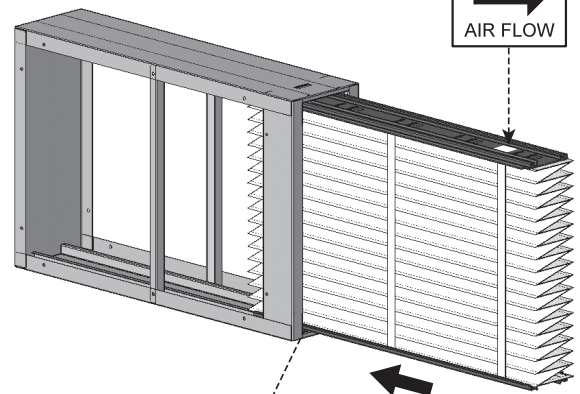

**Align filter in top and bottom rails  
and slide into place. Reinstall door.**

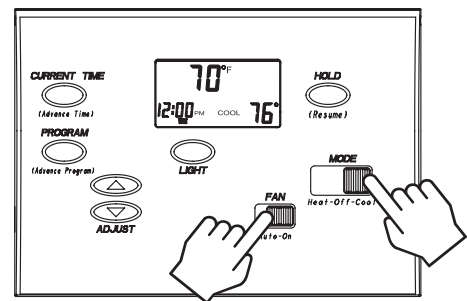

**Return thermostat to original settings.**