


1. Insert 3/8"-16x2" Carriage Bolt through bottom of foot.


2. Add one 3/8" Bonded Washer and two 3/8" Hex Nuts.



3. Screw on the adjustment U-Bar until foot is locked in place.

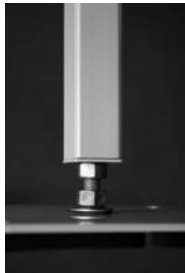

4. Remove Hex Bolts and Washers from the adjustment U-Bars to adjust to your desired width (Adjusts in 1" increments).

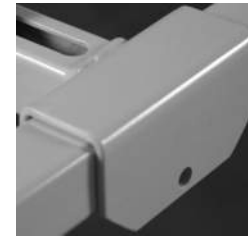

5. Attach arms to completed U-Bars. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" Nut to hole on face of arm.



6. Attach the two stability arms to the sides of the stand. Insert one 3/8"-16 x 1 3/4" Hex Bolt, 3/8" Split Washer and 3/8" Nut to hole on face of arm.



7. Mount unit to stand and insert in slot one 3/8"-16 x 2 1/2" Bolt, two 3/8" Galvanized Washers, one Rubber Washer, one 3/8" Split Washer and one 3/8" Nut (Follow order of hardware that is on the bolt in the bag when inserting on stand).



8. Bolt unit to foundation (Hardware not included).

*\*Quick-Sling offers a 2-year warranty on steel, workmanship; 1-year warranty on powder coating.*