




Turn to the experts

Quickstart Guide CARRIER ROOM AIR PURIFIER



Control Panel

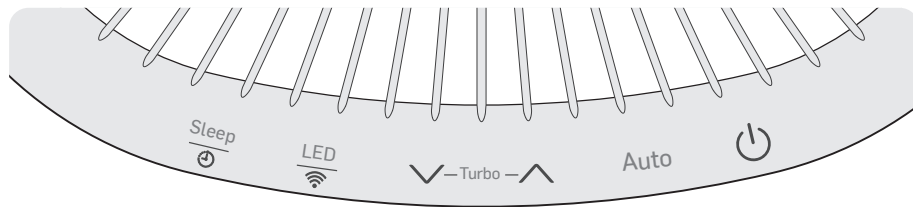

	Sleep mode & Timer		Turn up the fan speed and time (by 1 hour)
	LED ON/OFF & Wi-Fi connection*		Smart automatic operation
	Turn down the fan speed and time (by 1 hour)		Power ON/OFF


*Wi-Fi not available on the Carrier Room Air Purifier or Carrier Room Air Purifier XL.

How to replace the filter




- Remove the plastic packaging from the filter before use.
- Keep plastic packaging away from children as it may cause suffocation.


1 Hold the top cover of the product with both hands and pull upwards.

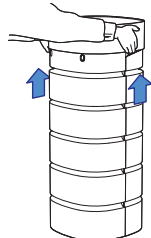


2 Grasp the filter cover hole on the rear filter cover and pull it forward.

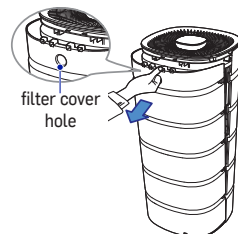


3 Remove the plastic packaging from the filter.

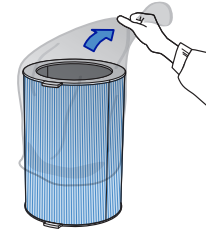


4 Push the filter into the top and bottom part of the product with the filter in close contact.

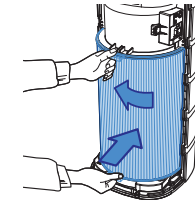

5 Replace filter cover.
▶ Insert the cover into the fixed groove at the bottom of the product first.
▶ Slide the cover forward so that the cover fits into the top grooves.

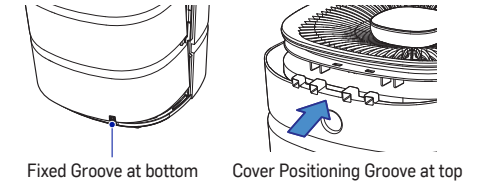

6 Hold the top cover of the product with both hands and slide it back in place, making sure the logo appears in the front.

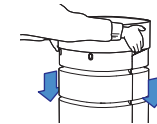

7 When the filter installation is complete, press the + "Auto" button on the control panel for 5 seconds or more to initialize it.
▶ Red filter light will go off when product is reset.

Filter Replacement Period

Filter Description	Indicator Light	Cleaning cycle	Replacement period	Note
Pre-filter	 On=Red	2 times / month	6 to 12 months (depending on user environment)	The cleaning and replacement cycles of the filter may vary depending on the environment.
High efficiency filter				
Carbon filter				

How to fit the Casters (Optional)

- 1 Inside of the filter package, there is a small box containing 4 casters and 8 screws. If there is no caster box inside the filter box, please contact customer service.
- 2 Remove the four bottom bases from Air purifier with a screw driver.
- 3 Replace each base with a caster, utilizing two screws per caster.
- 4 Retain the removed bottom bases and screws for future use.

HEALTHYHOMES



Turn to the experts

carrierathome.com 1-888-320-0909

©2020 Carrier. All rights reserved.

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations. Third-party trademarks and logos are the property of their respective owners.

01-811-20535-01